

1. Remove the rear cover.





2. Unscrew the horizontal mounting screw.



3. Using the previously unscrewed screw, attach the angle bracket to the base of the original spoiler mounting.

4. Mark the place on the original spoiler mounting through the hole in the angle bracket.

5. Unscrew the original spoiler mounting.

6. Drill a hole in the original spoiler mount according to the marked point.

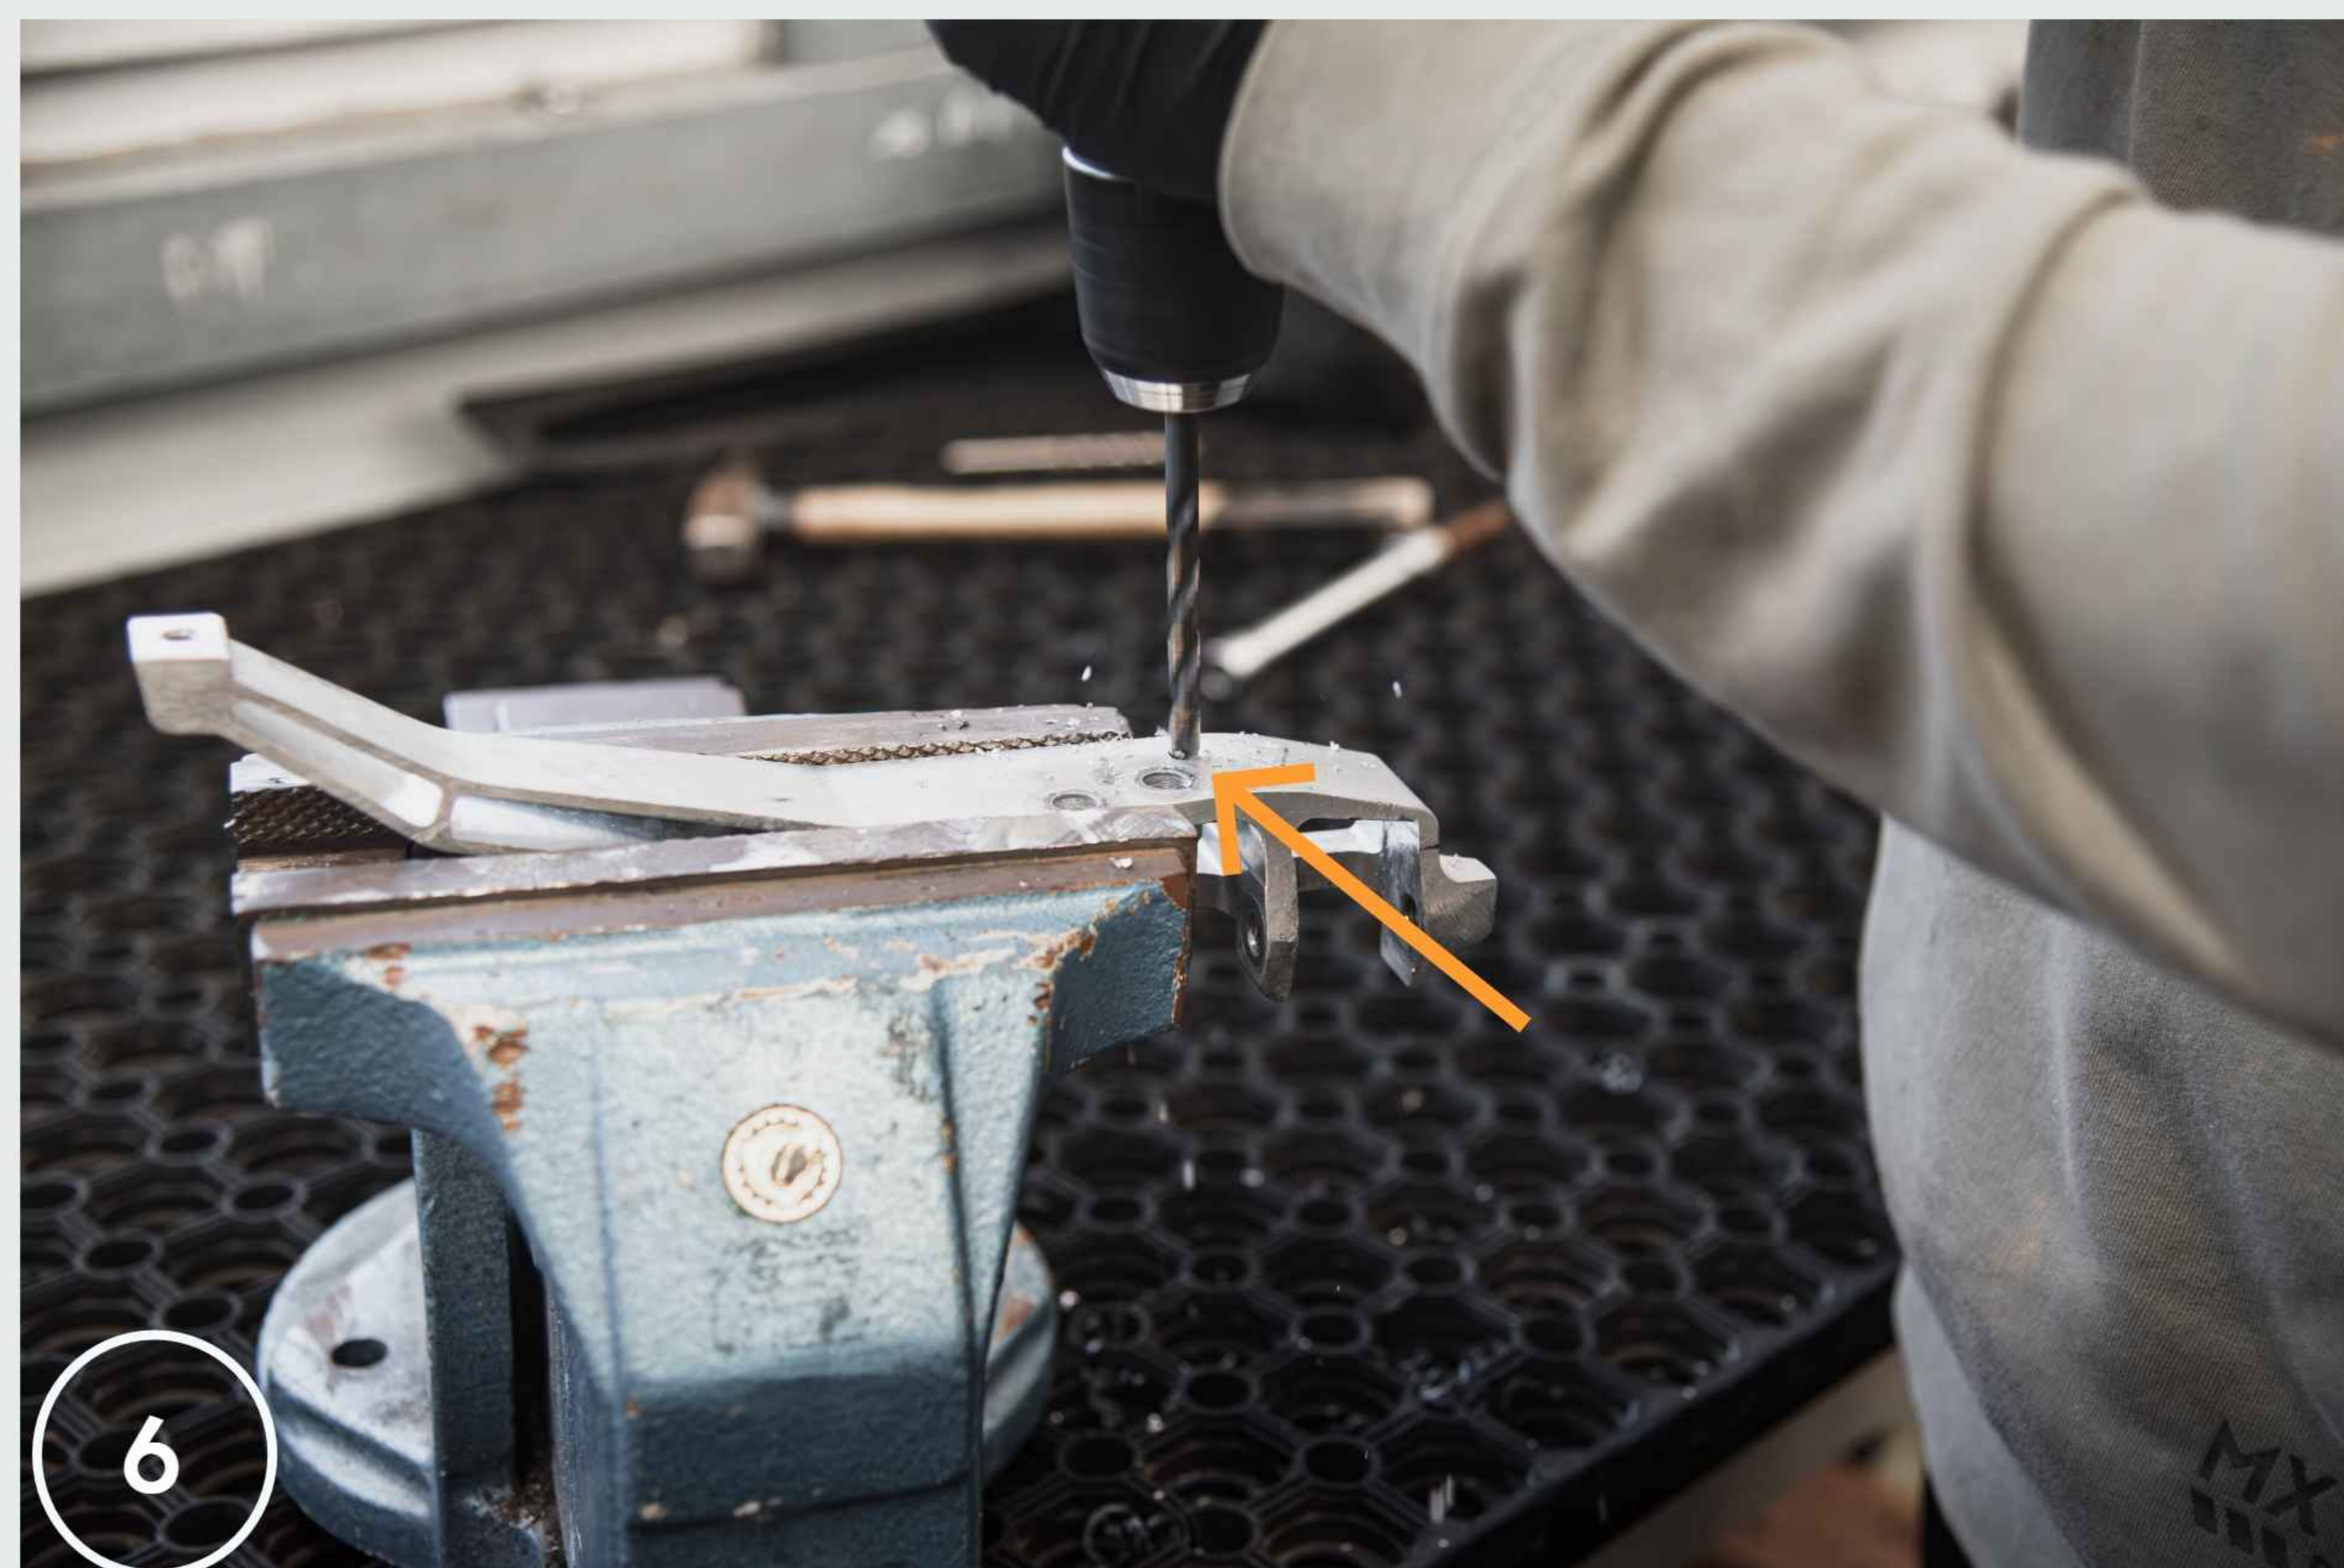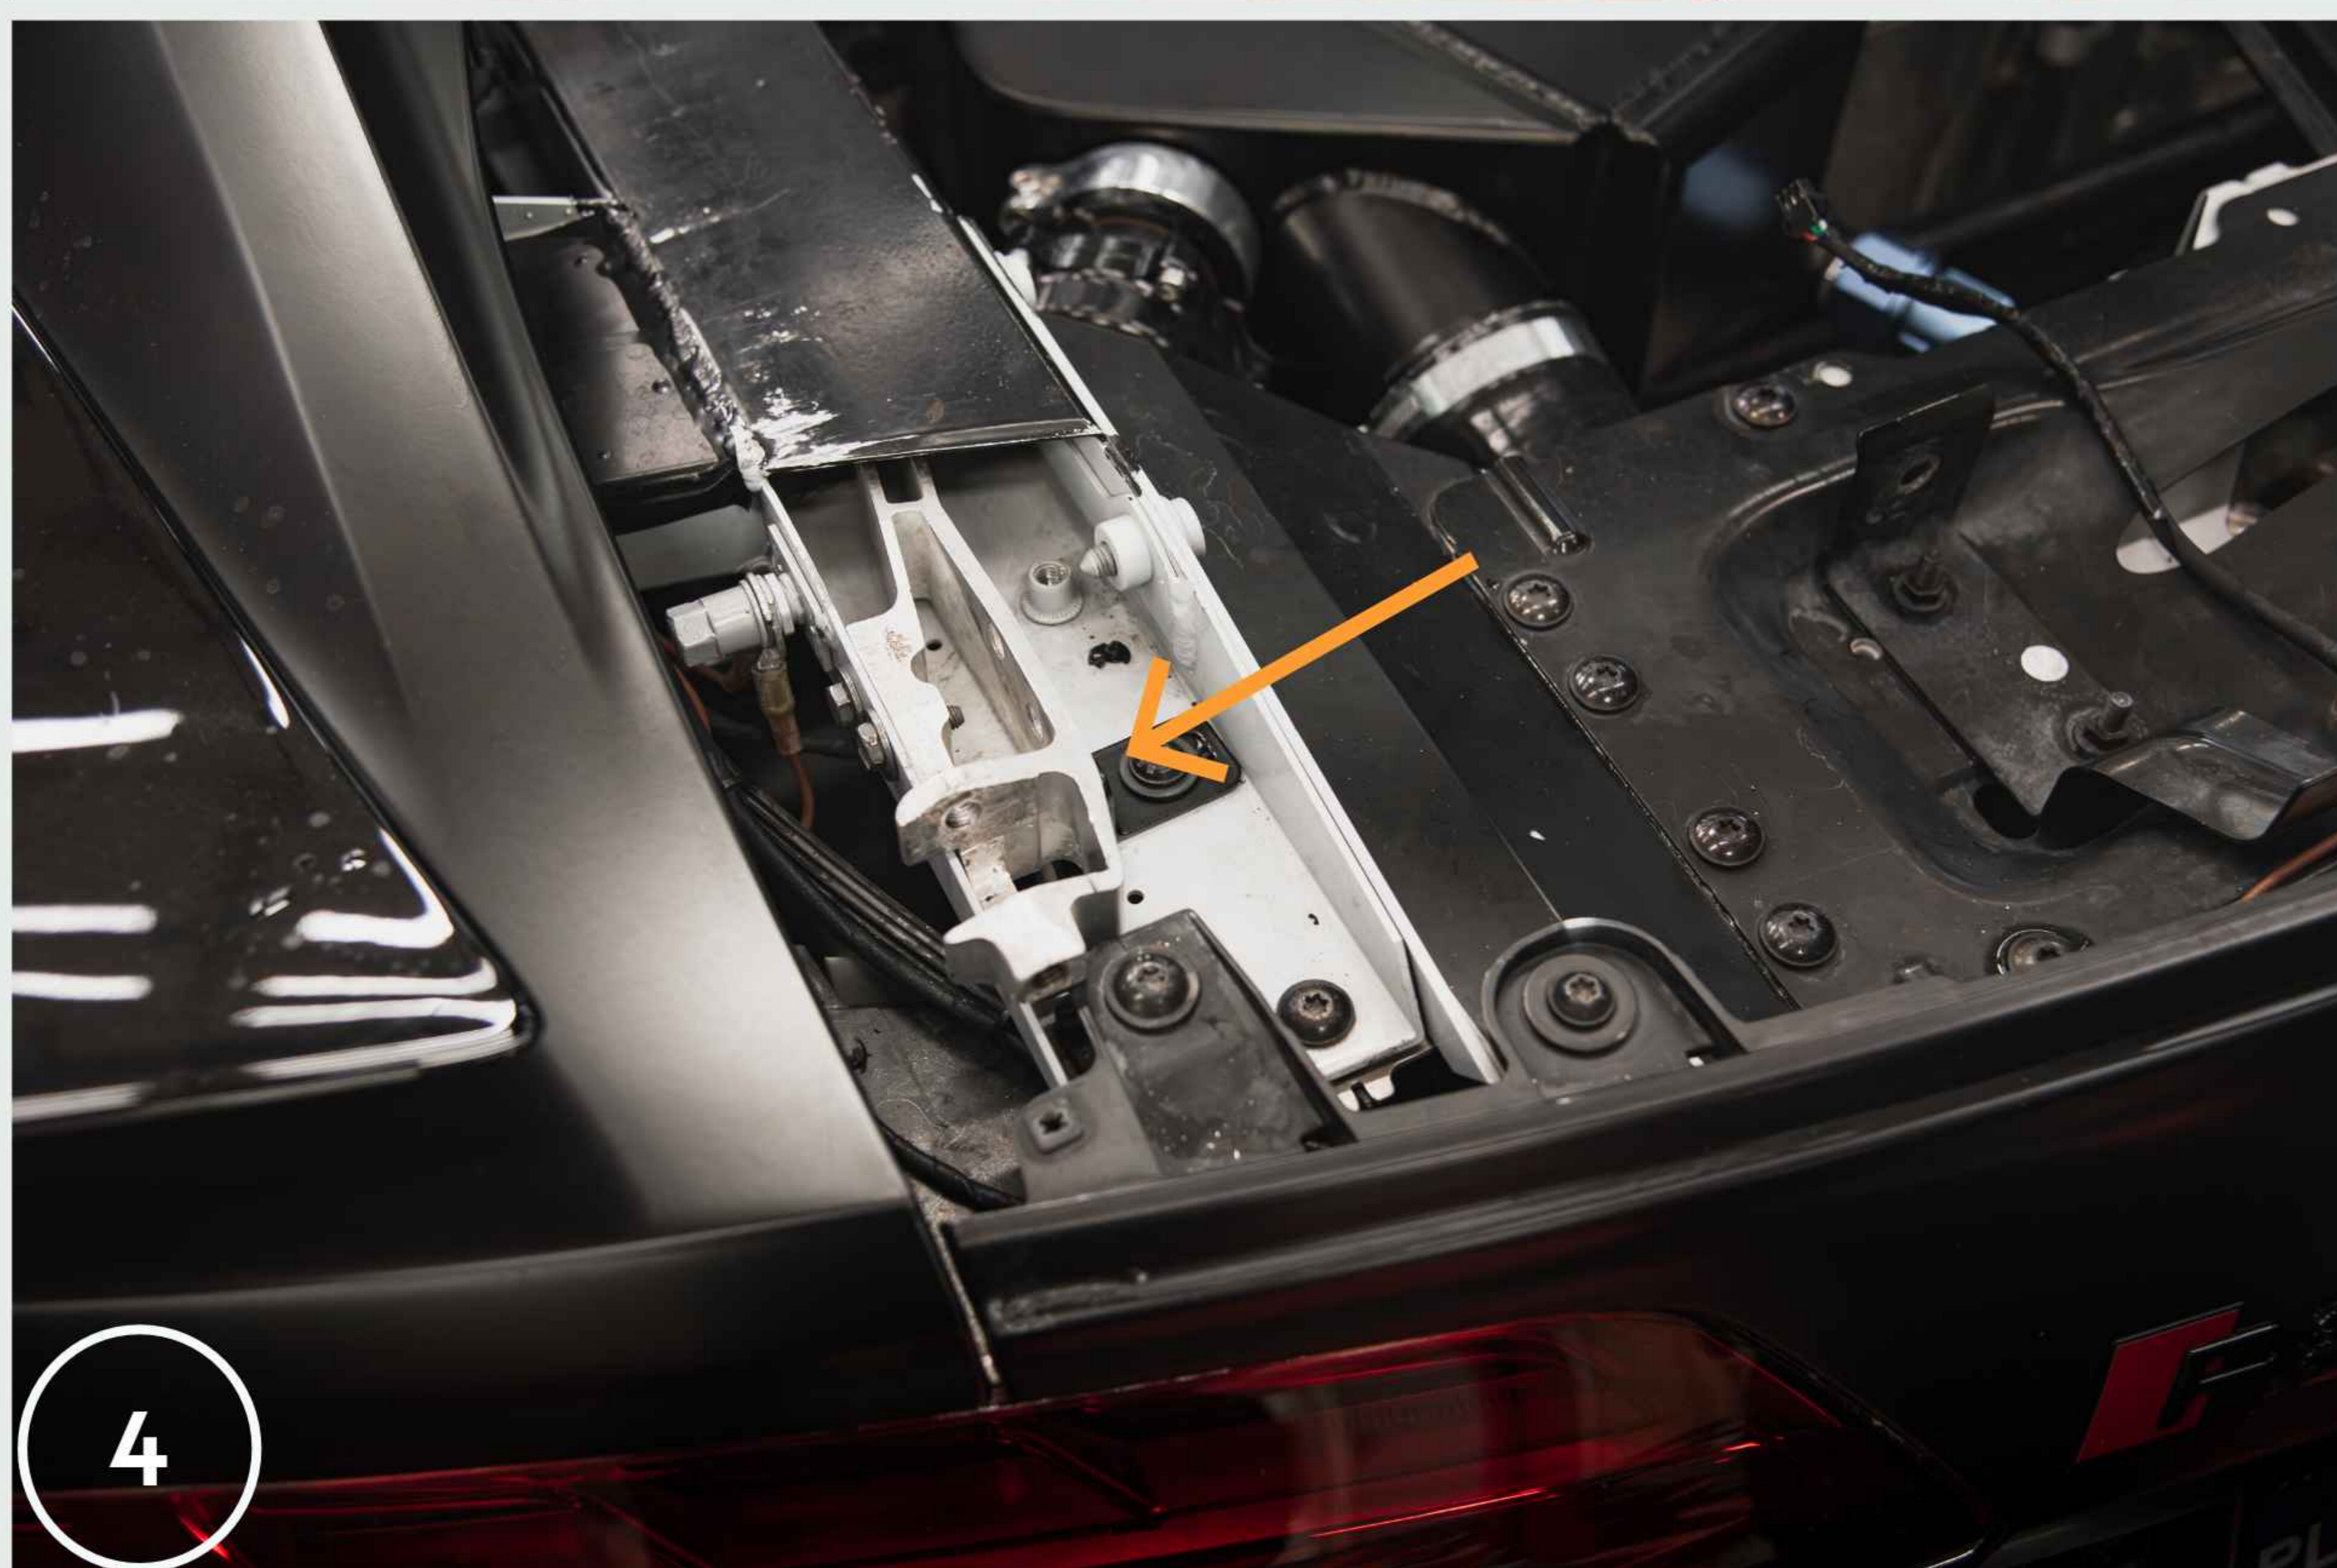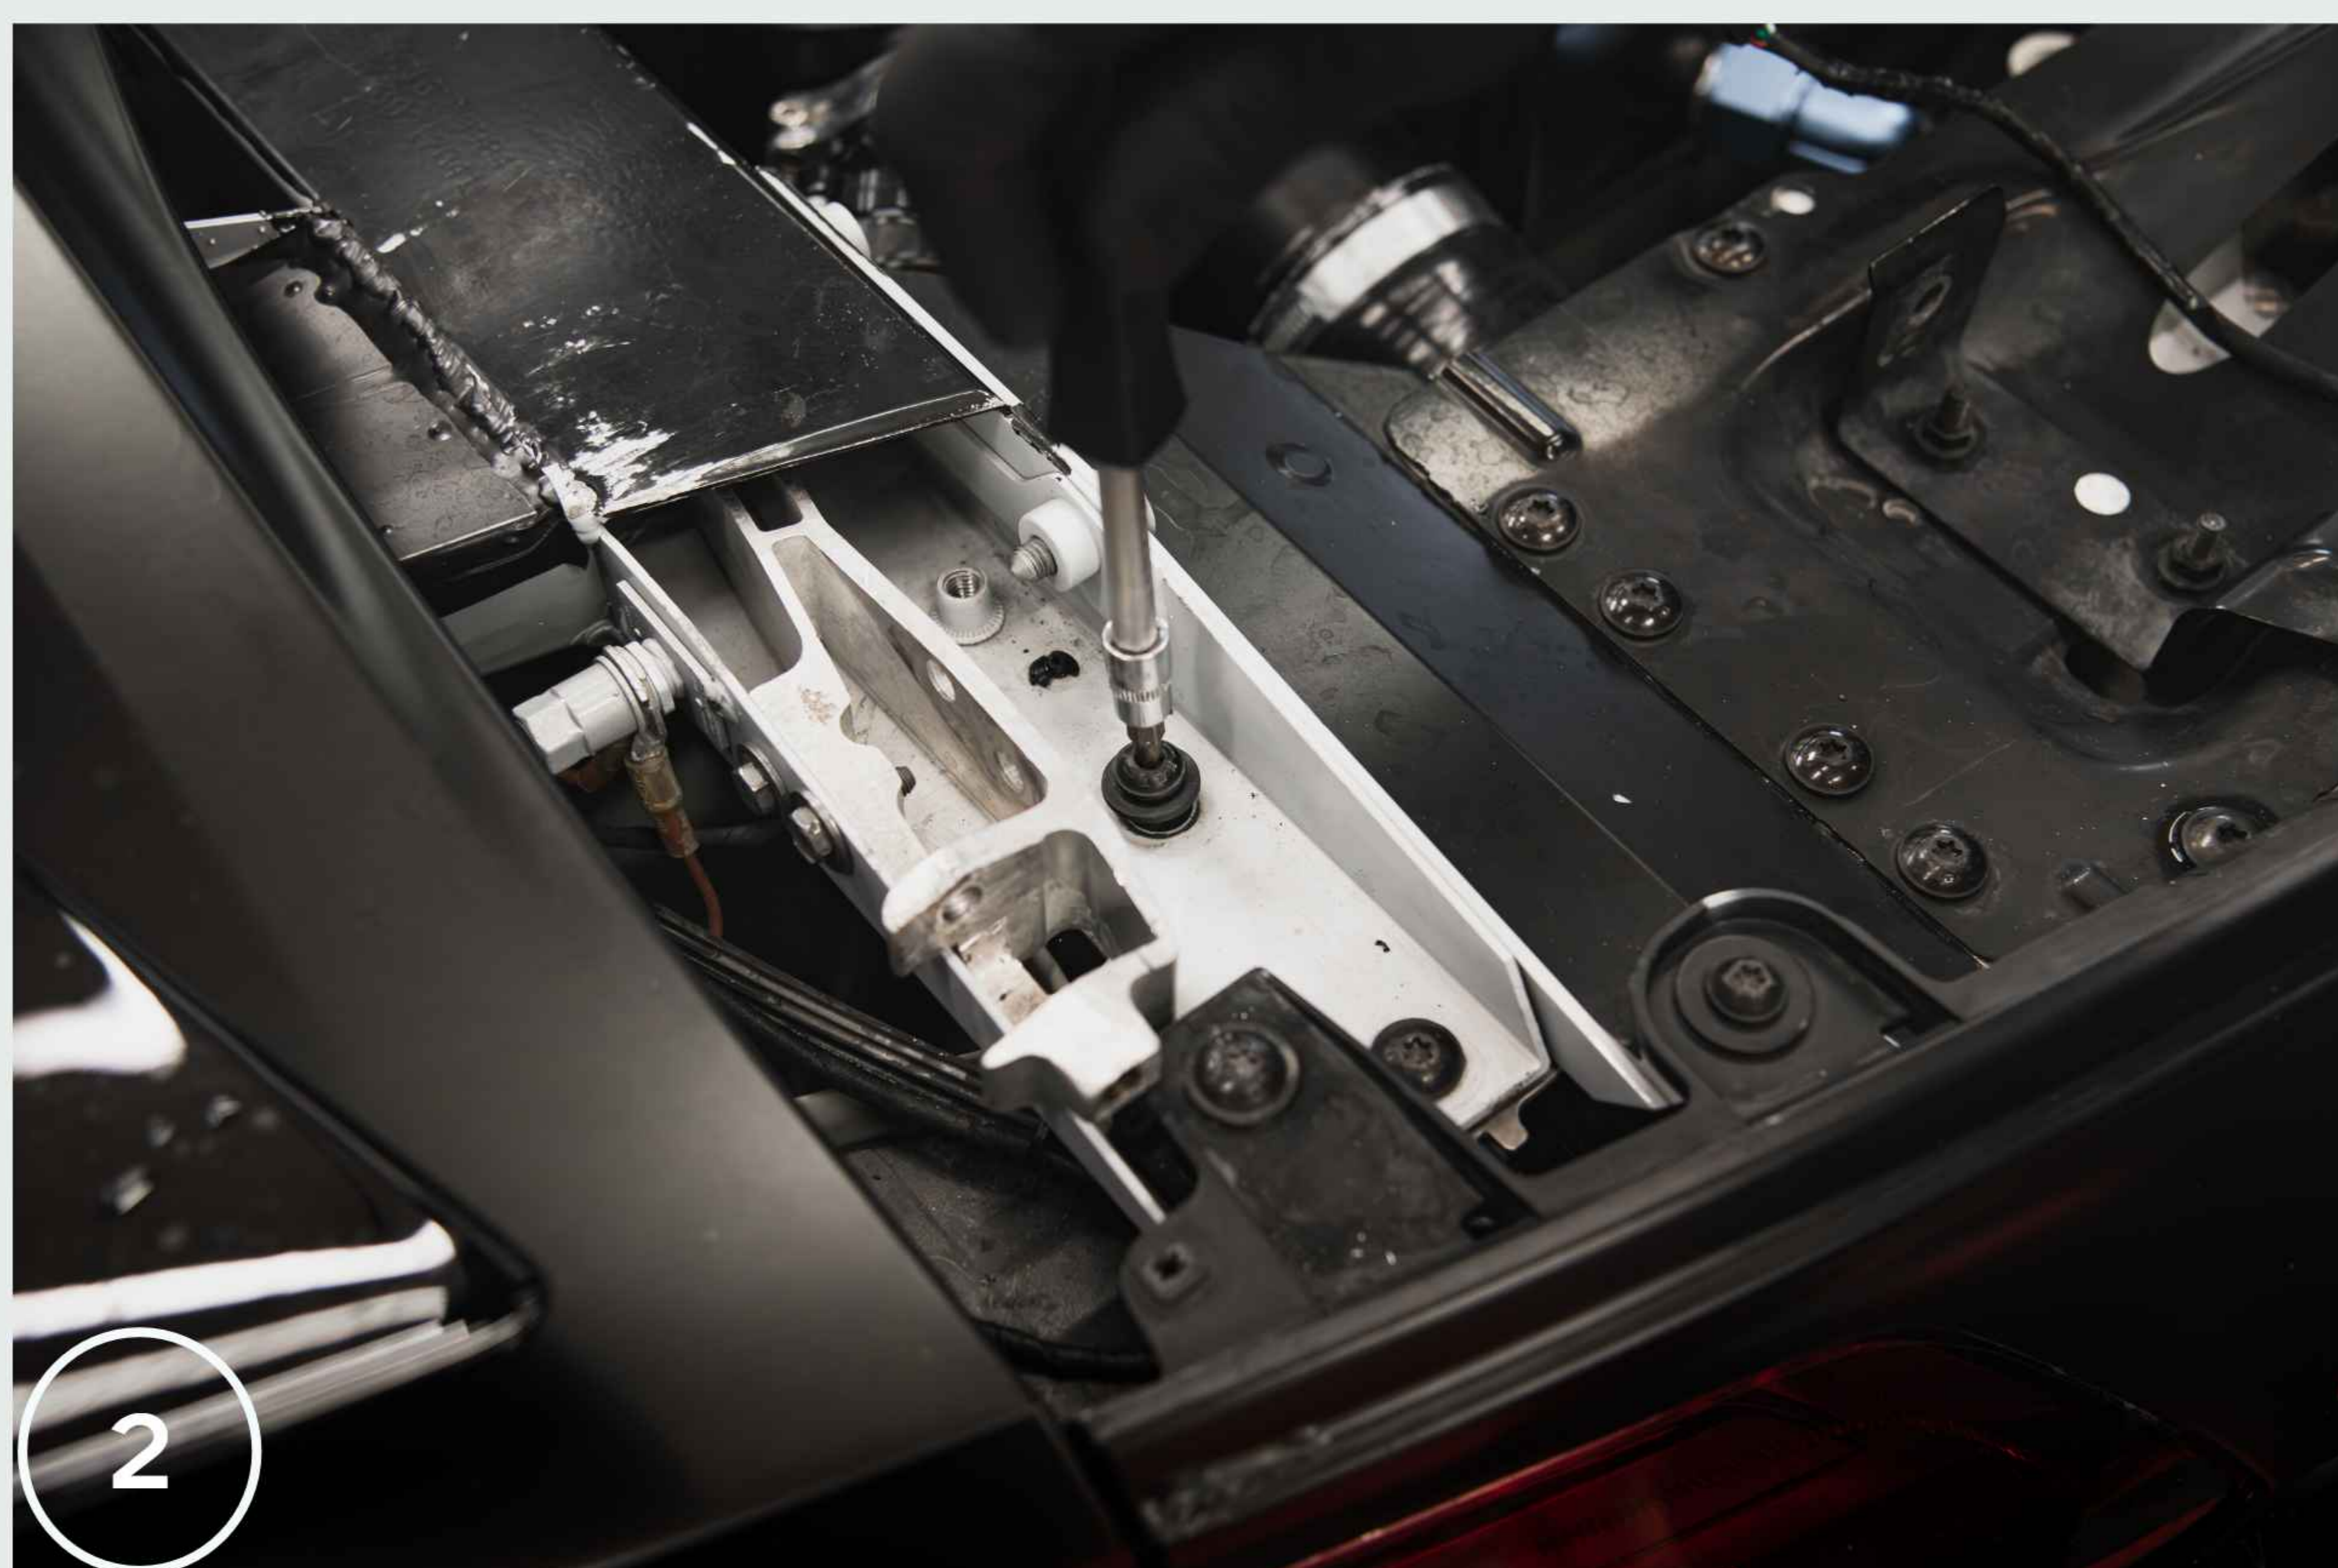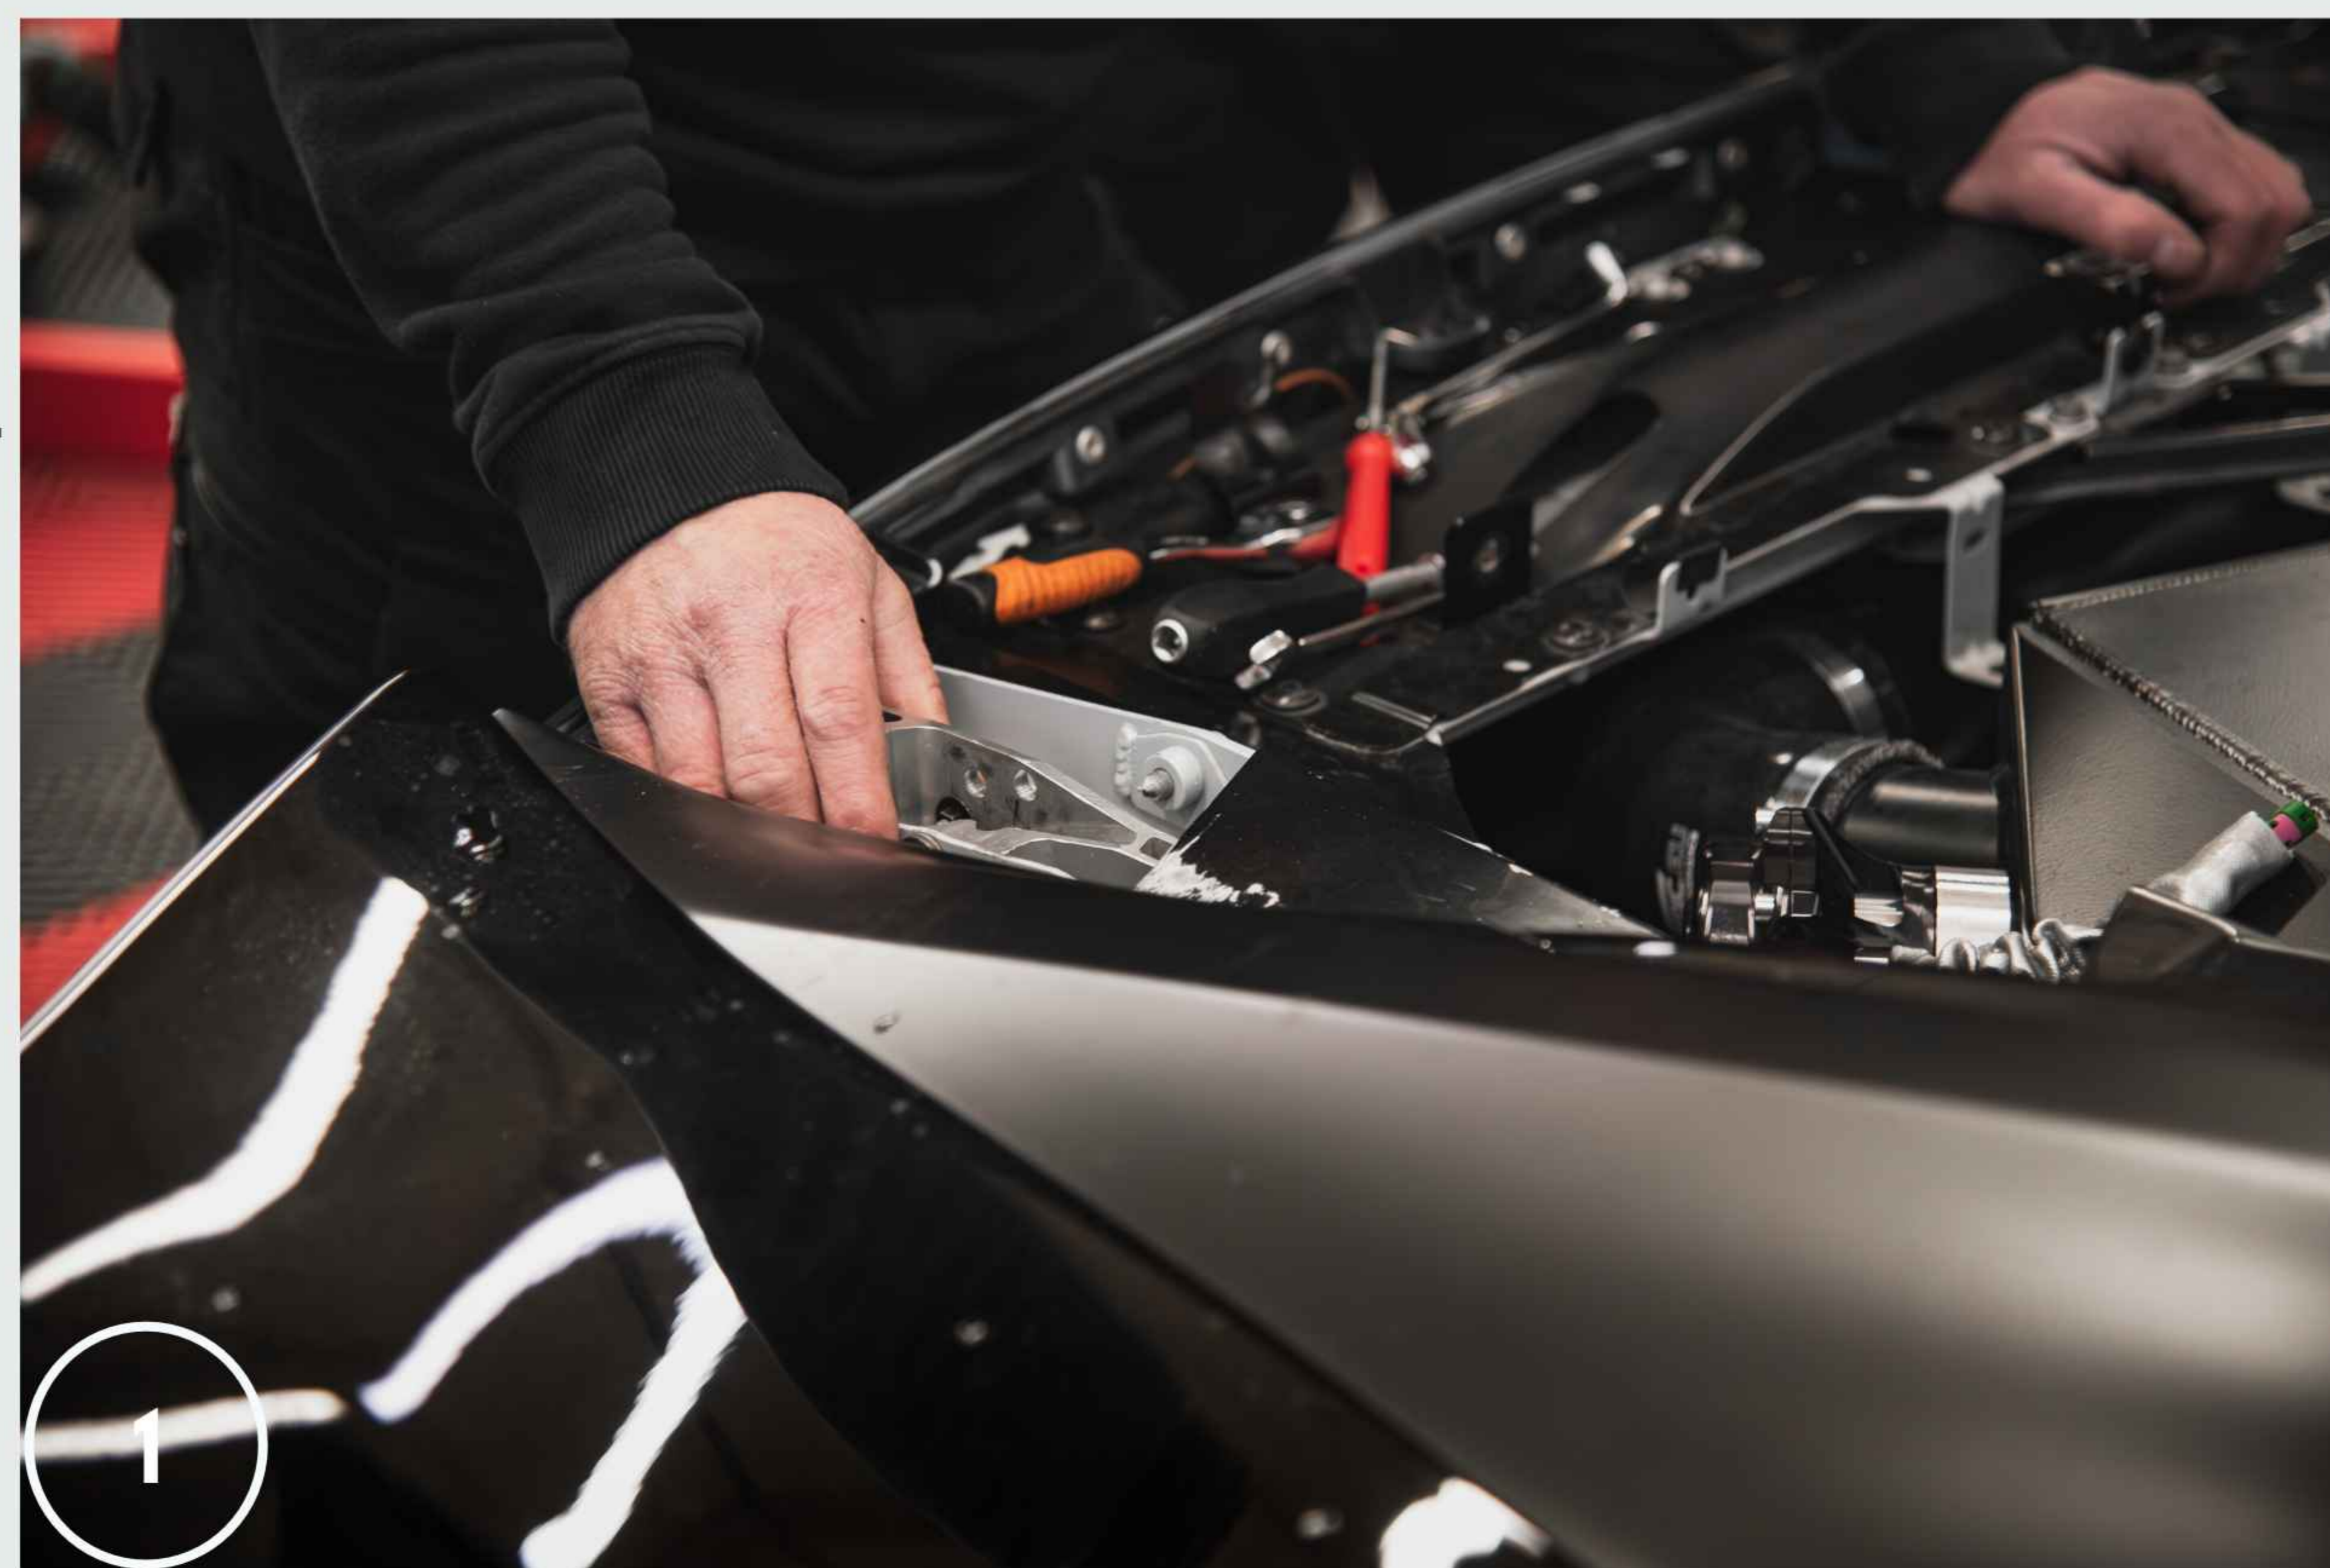

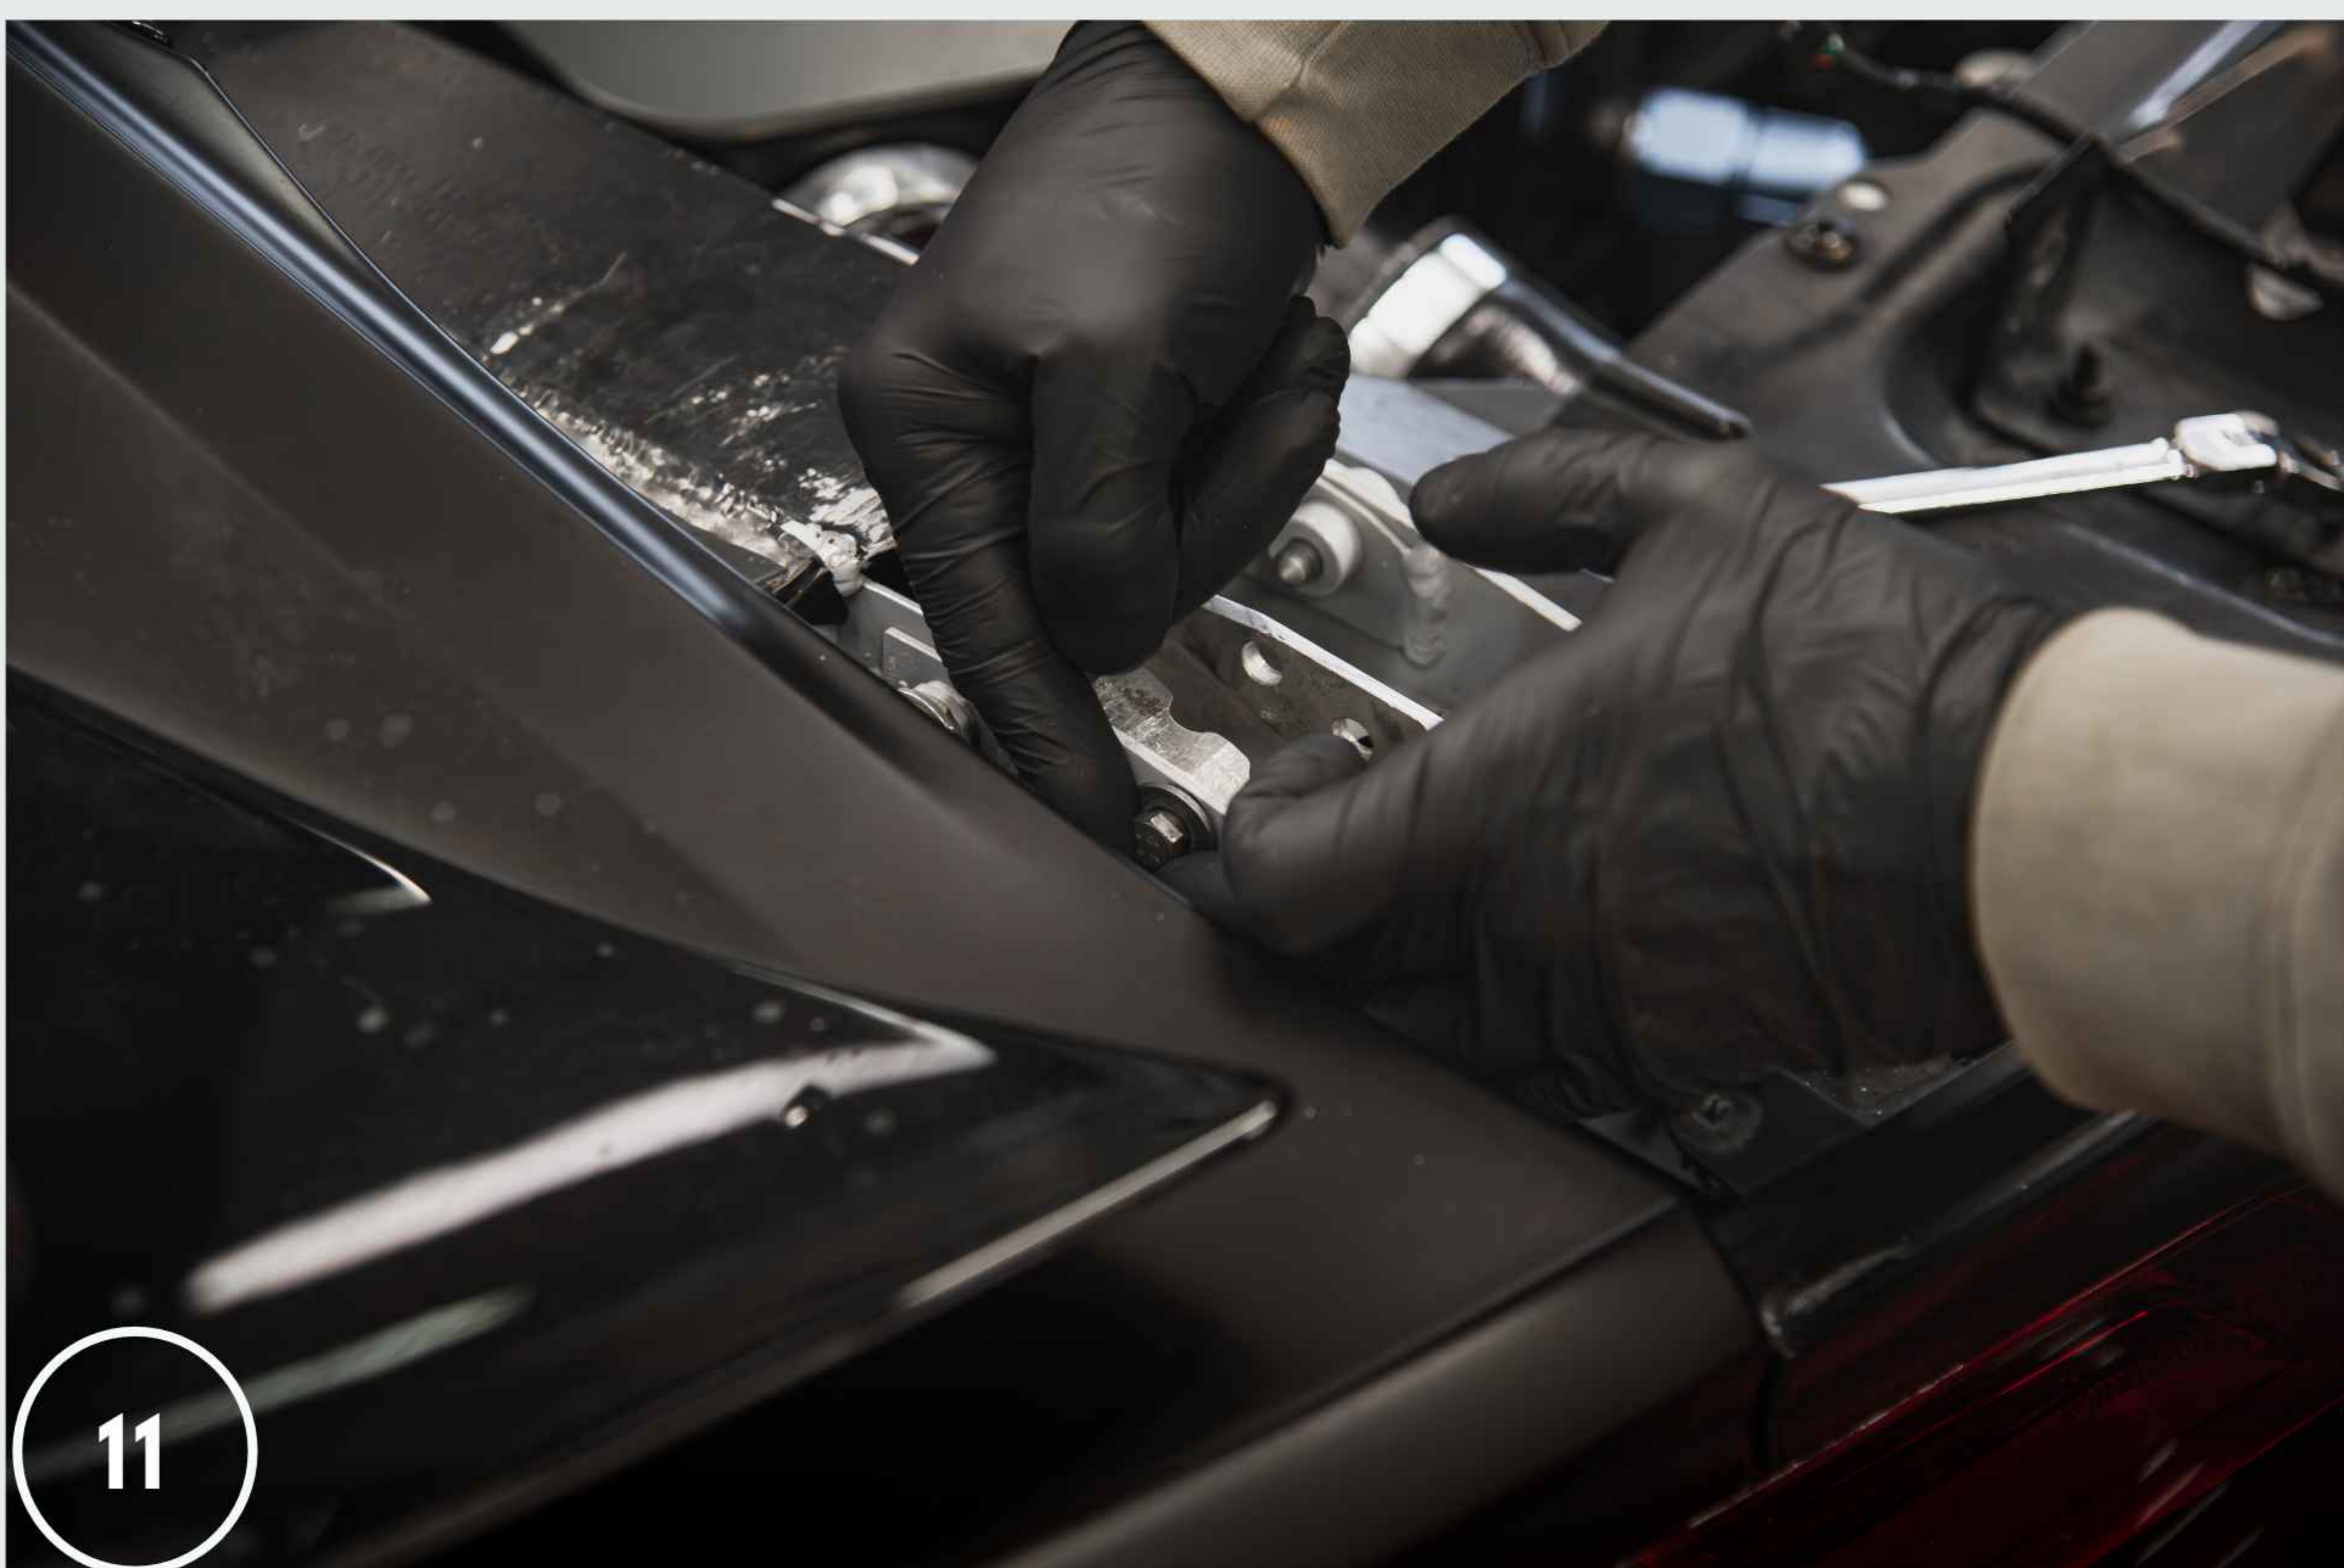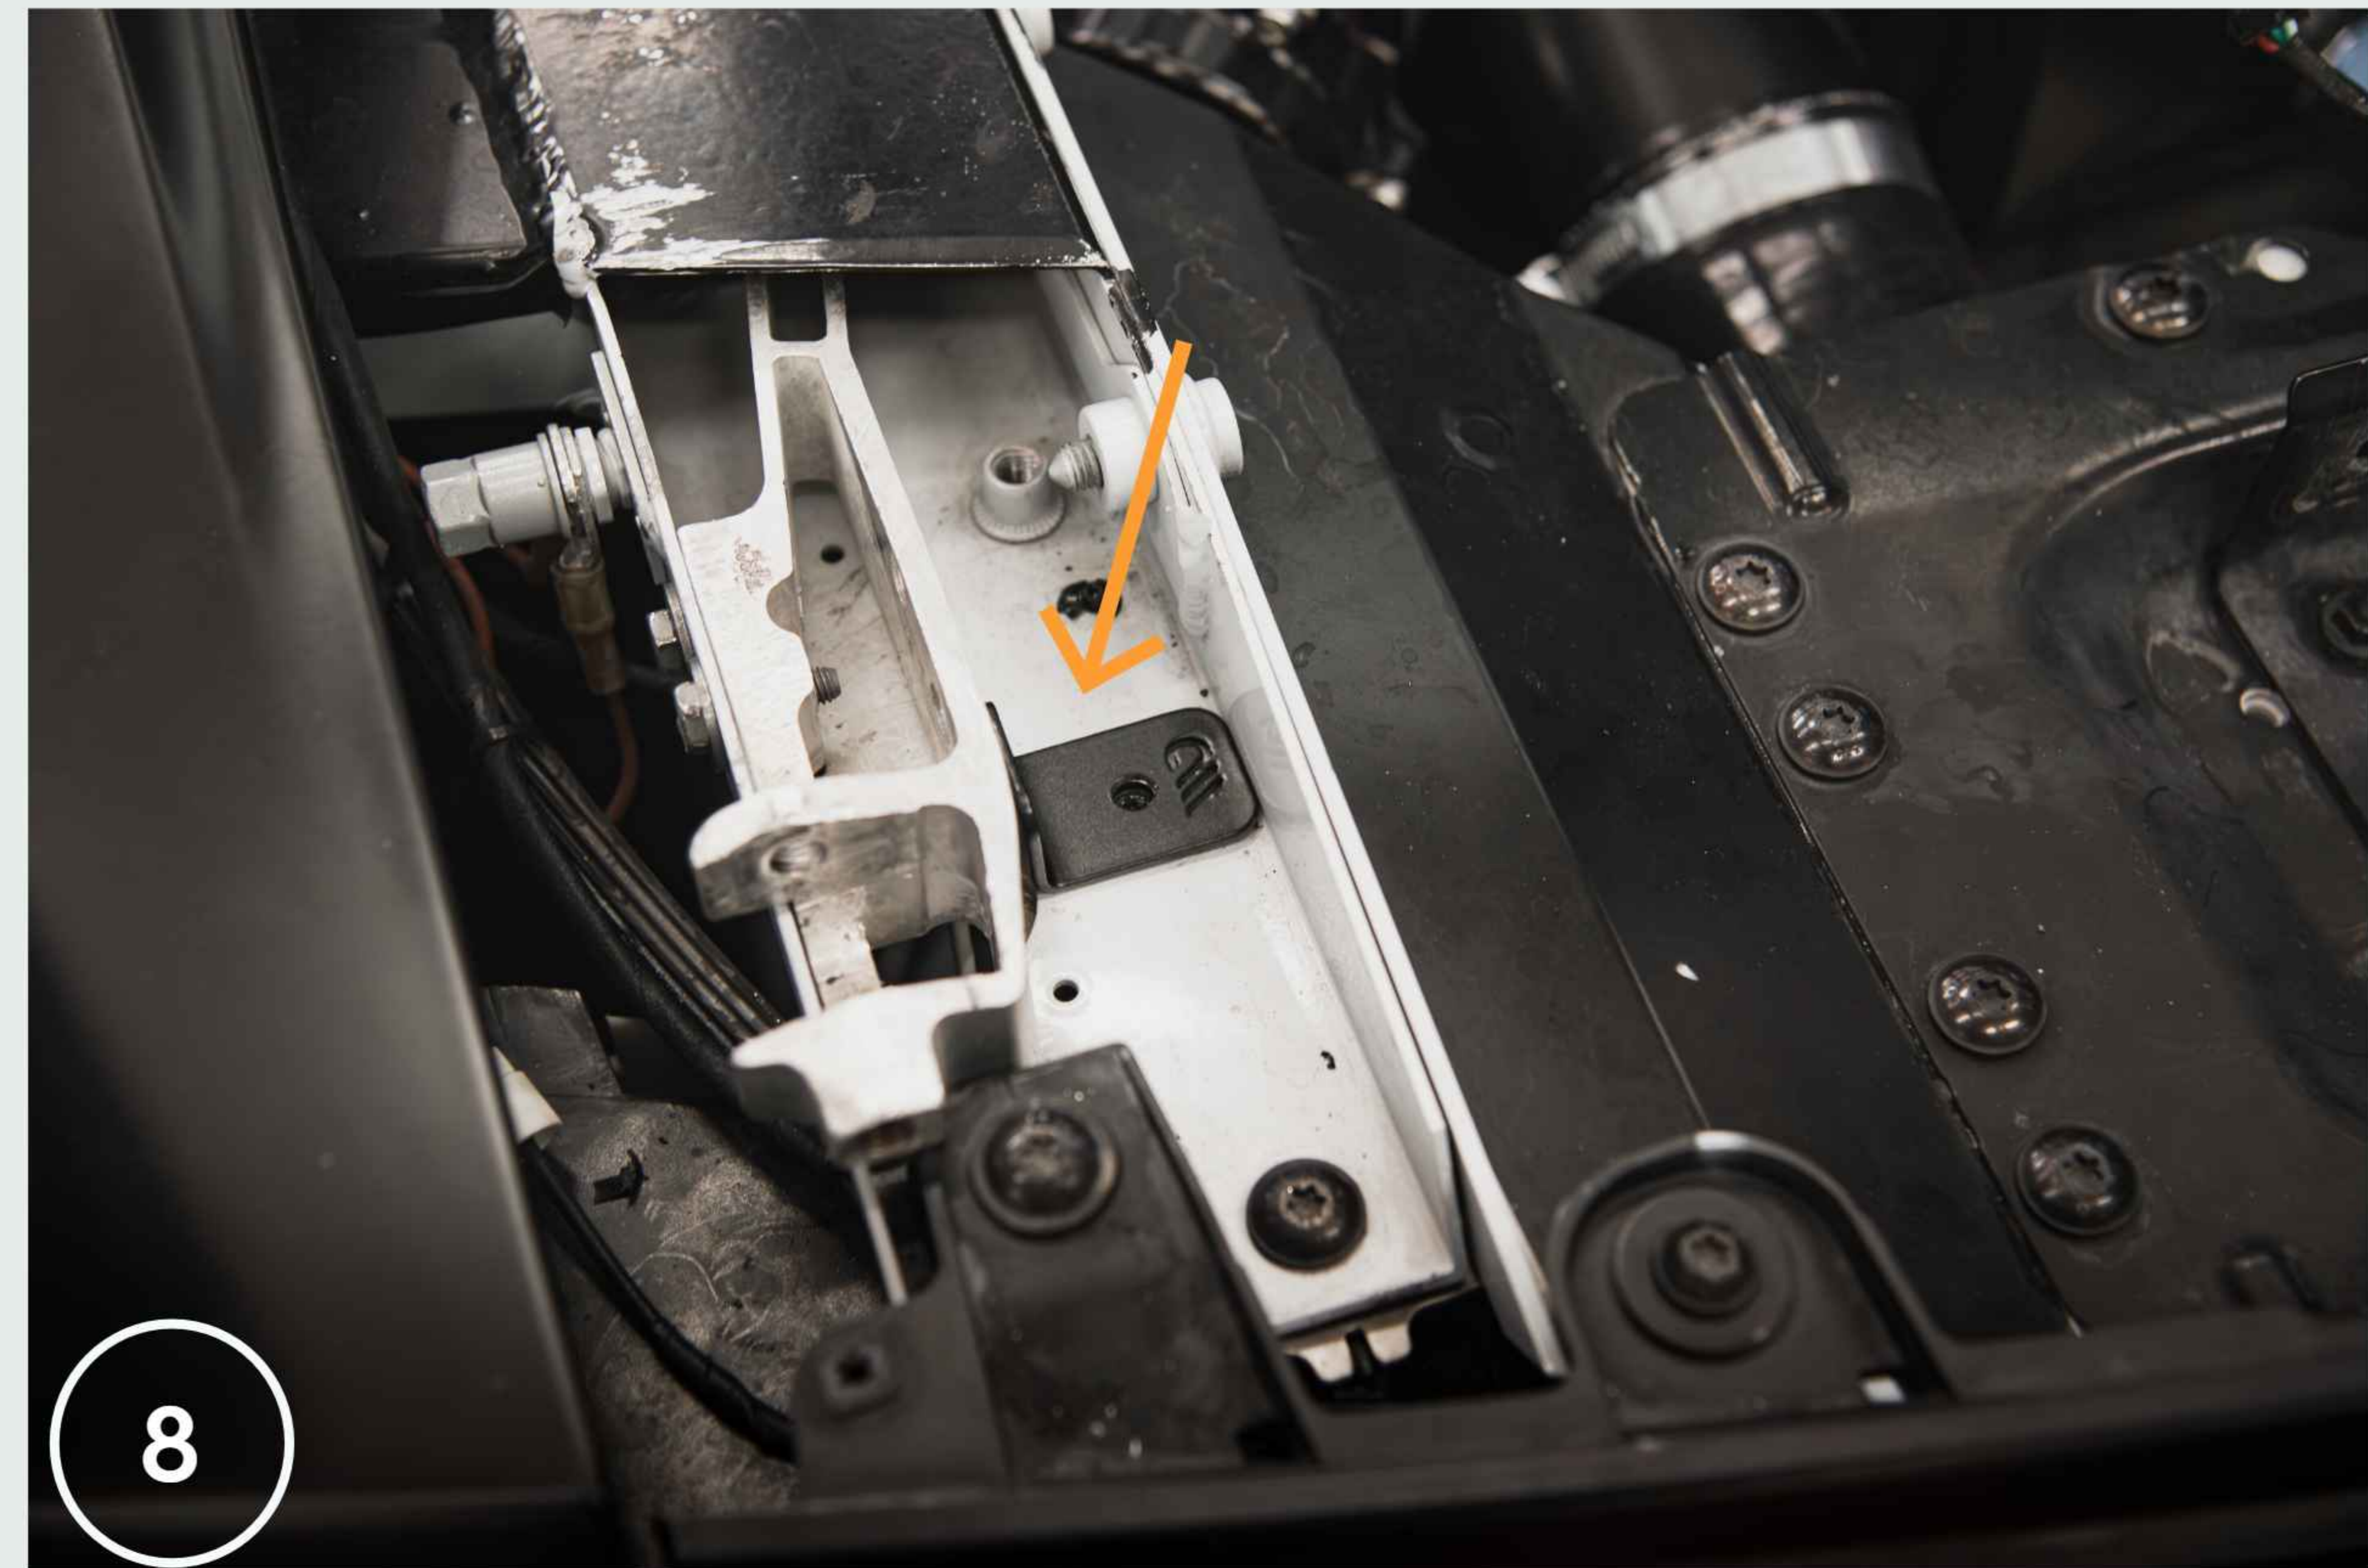

7. Place the original spoiler mount back on the base.

8. Place the angle bracket on the base so that it fits with the holes in the base and in the original spoiler mounting.

9. Screw the angle bracket to the base.

10. Put the screw through the holes in the angle bracket and in the corresponding hole in the original spoiler mounting.

11. Screw on the original spoiler mount.

12. Screw the angle bracket to the original spoiler mounting.

13. Repeat the same on the other side.





14. Insert the spoiler mount into the hole in the rear cover. On the rear cover, in line with the hole in the spoiler mount, mark where to drill the hole for the wiring.

15. Drill a hole and carefully check whether the holes for the mounting screws and the hole for the wiring match.



16. Screw the spoiler mounts to the rear cover.



17. Tighten the screws securely.

18. Put the rear cover with spoiler mounts in place.

19. Insert the spoiler mounting ends into the original mounting appropriately.

20. Align and tighten the rear cover.

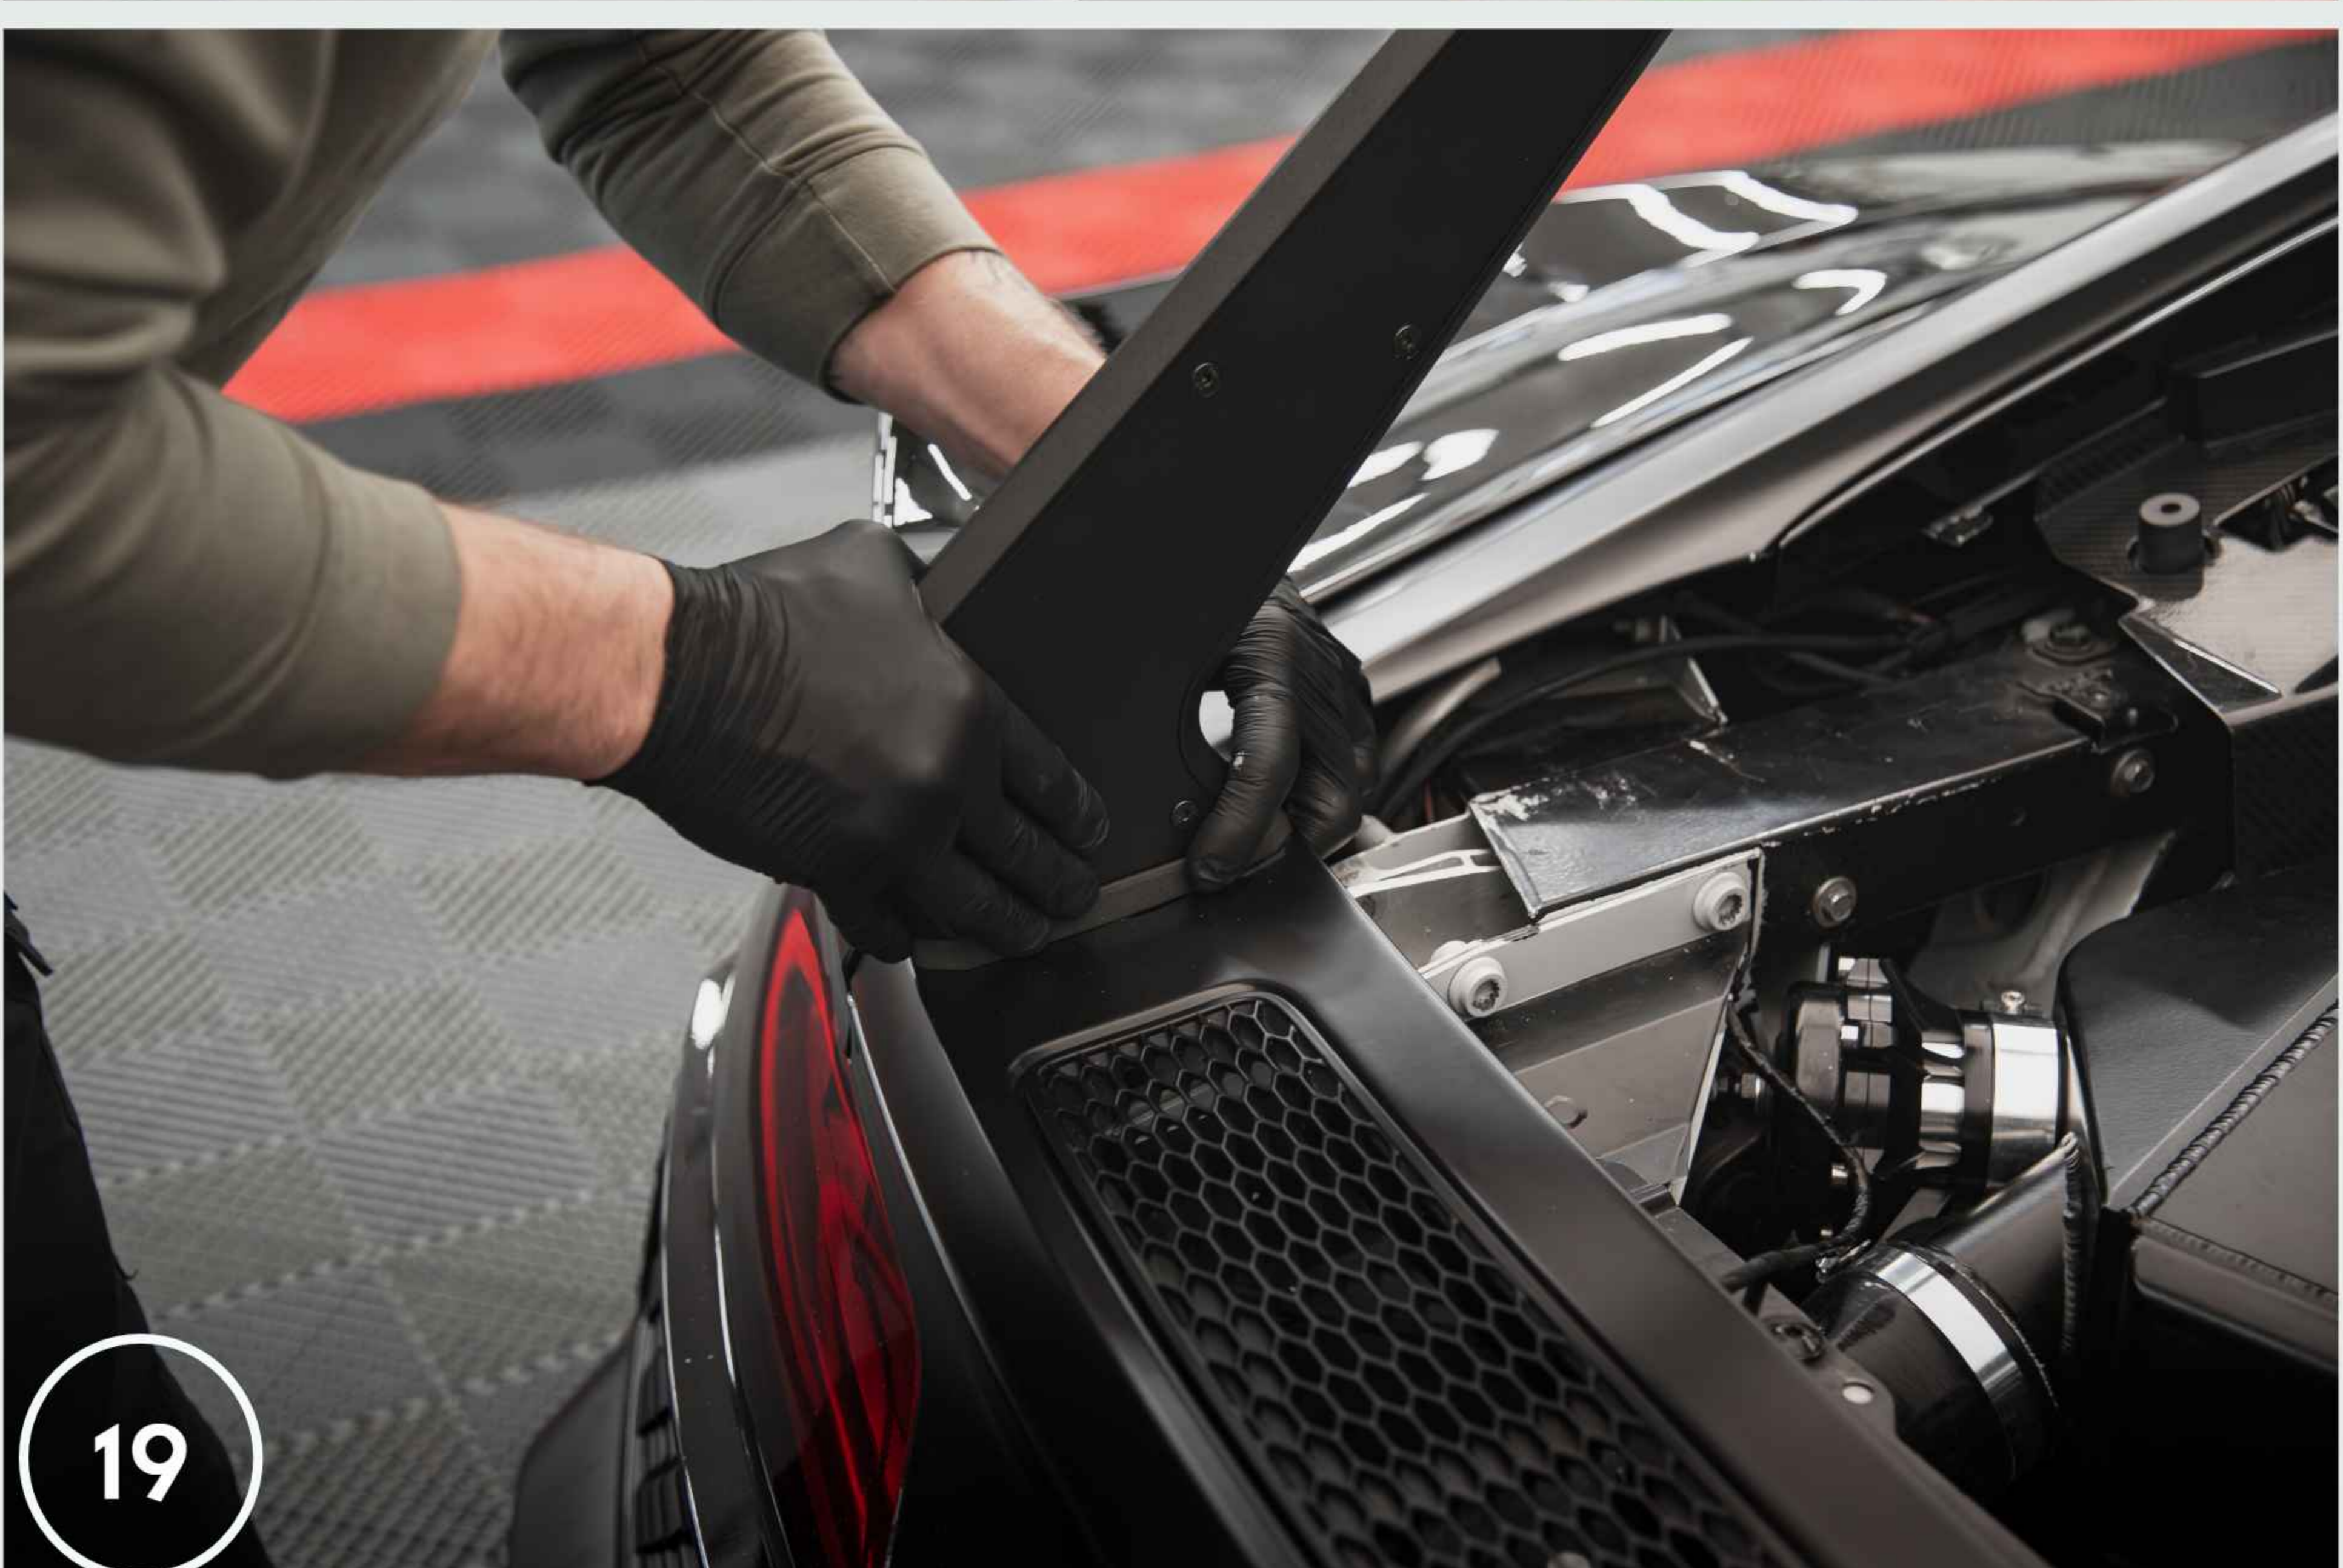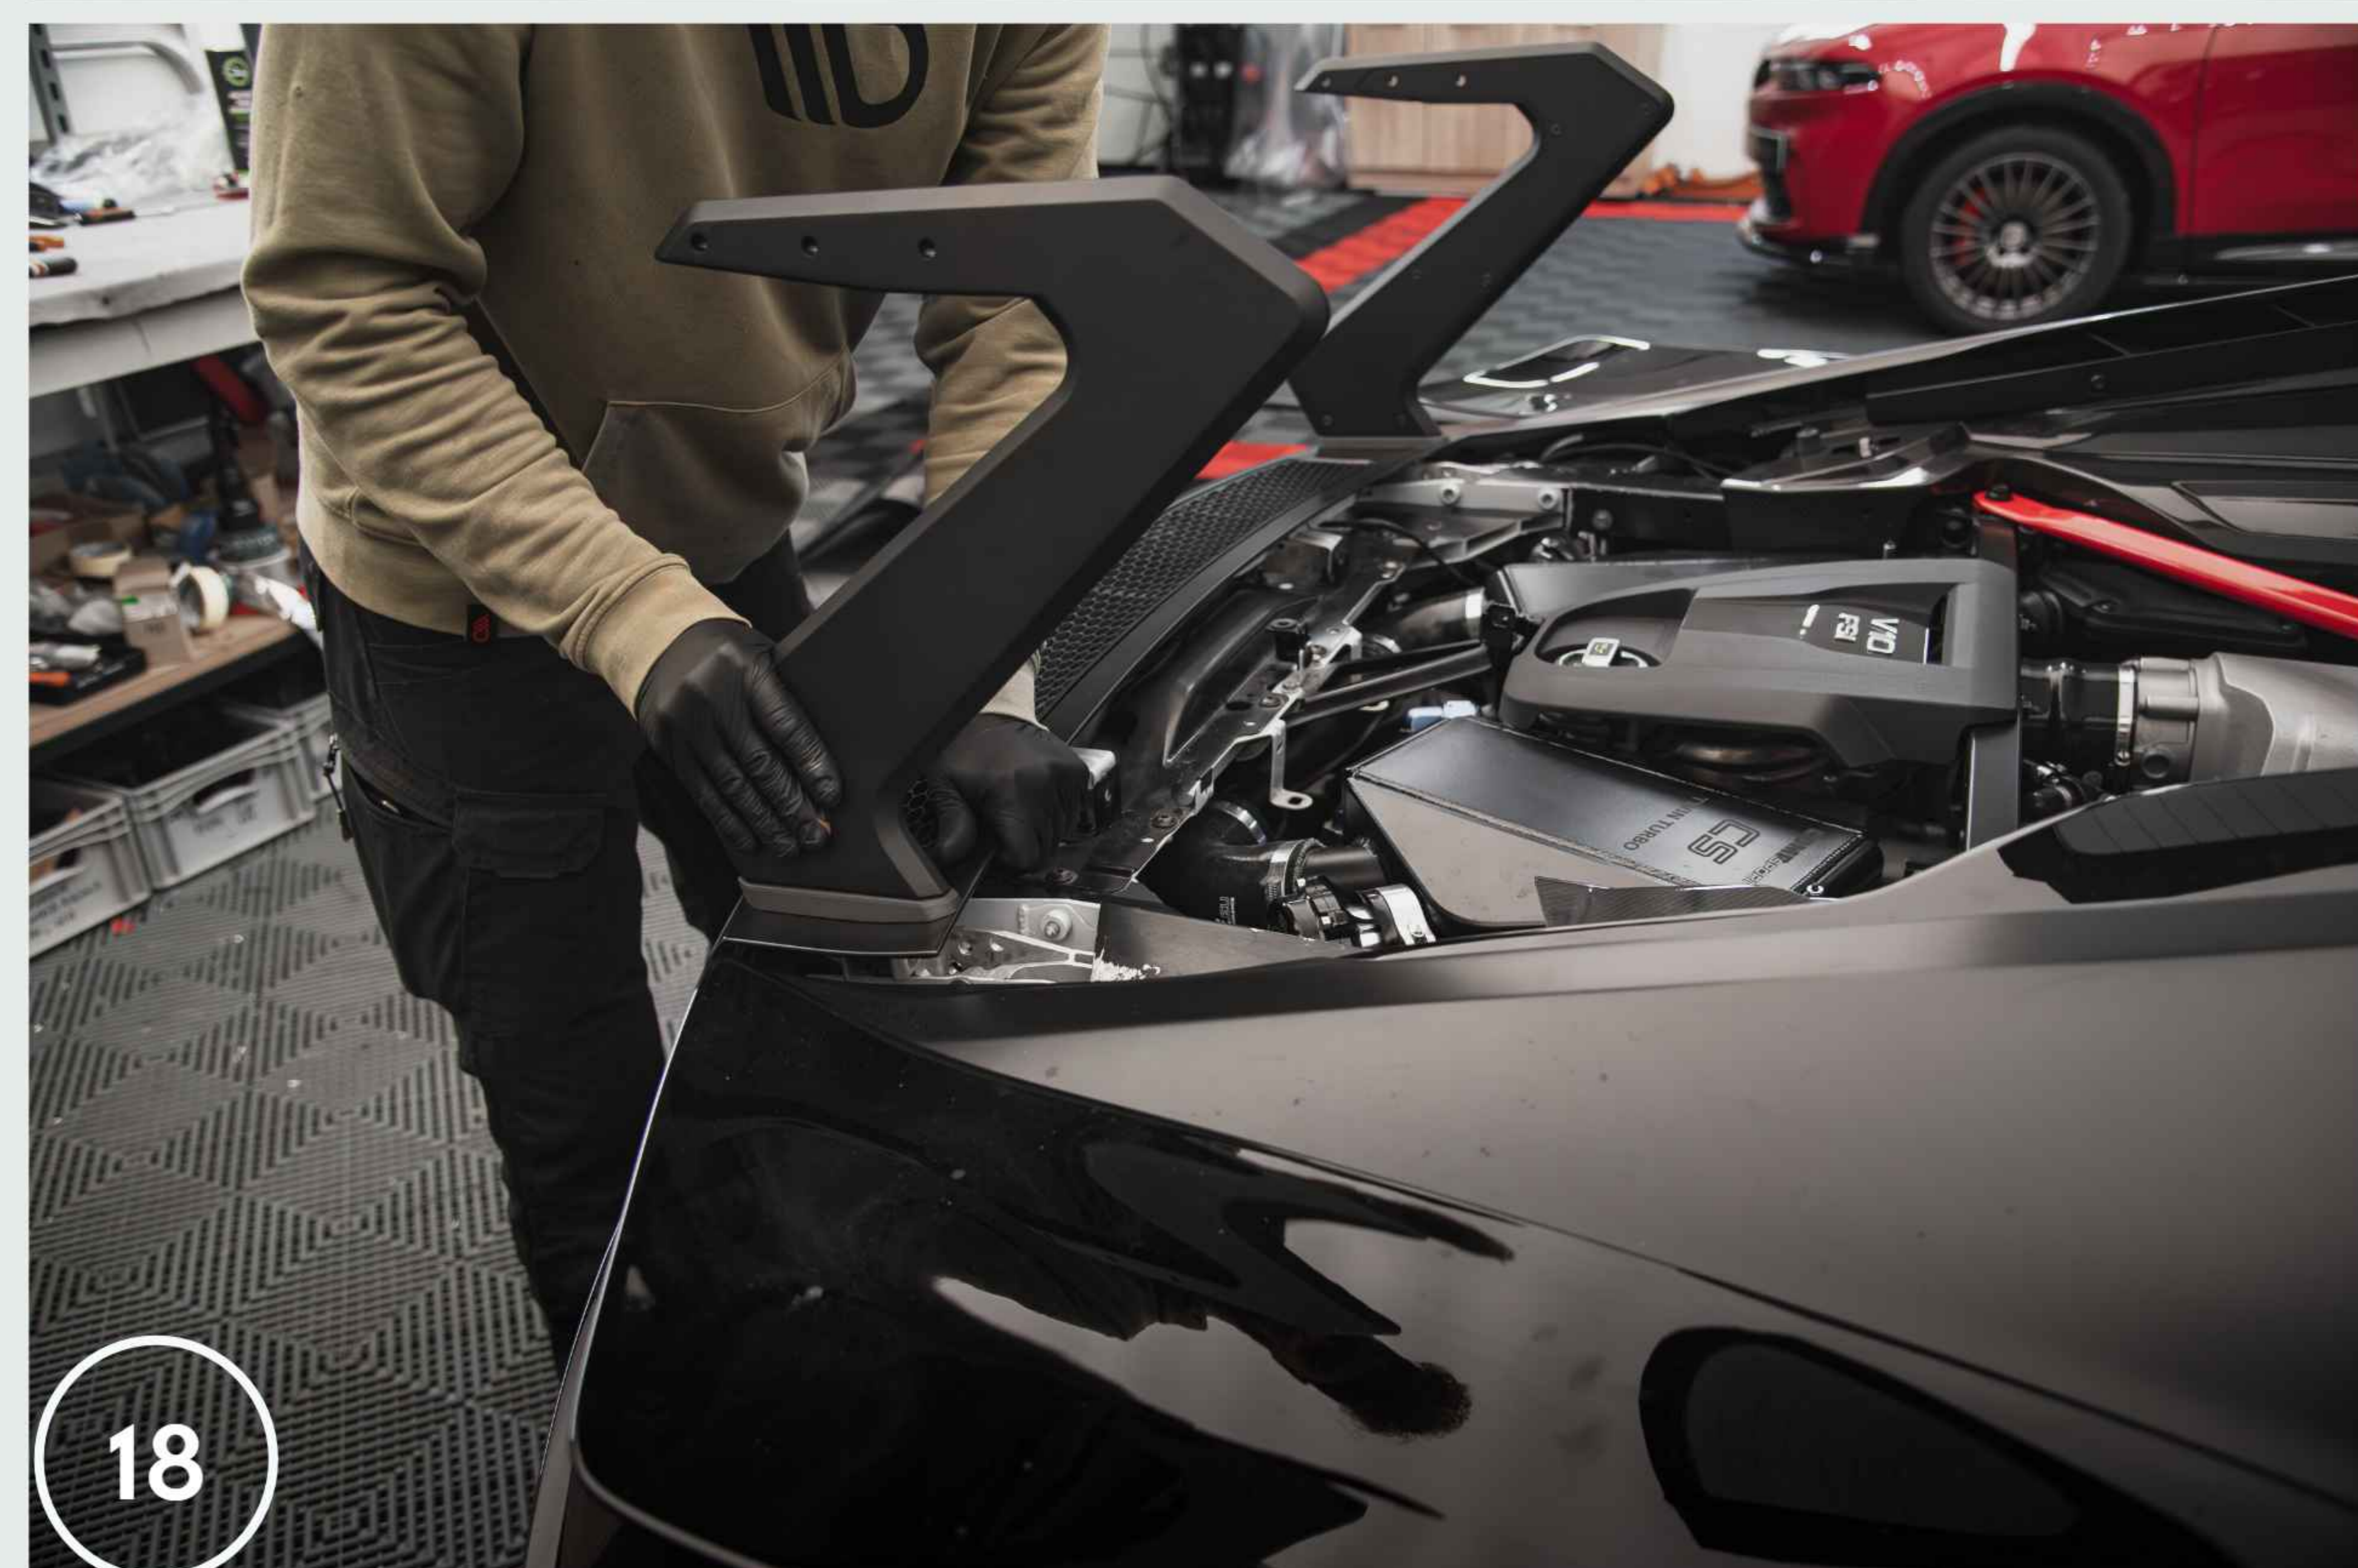

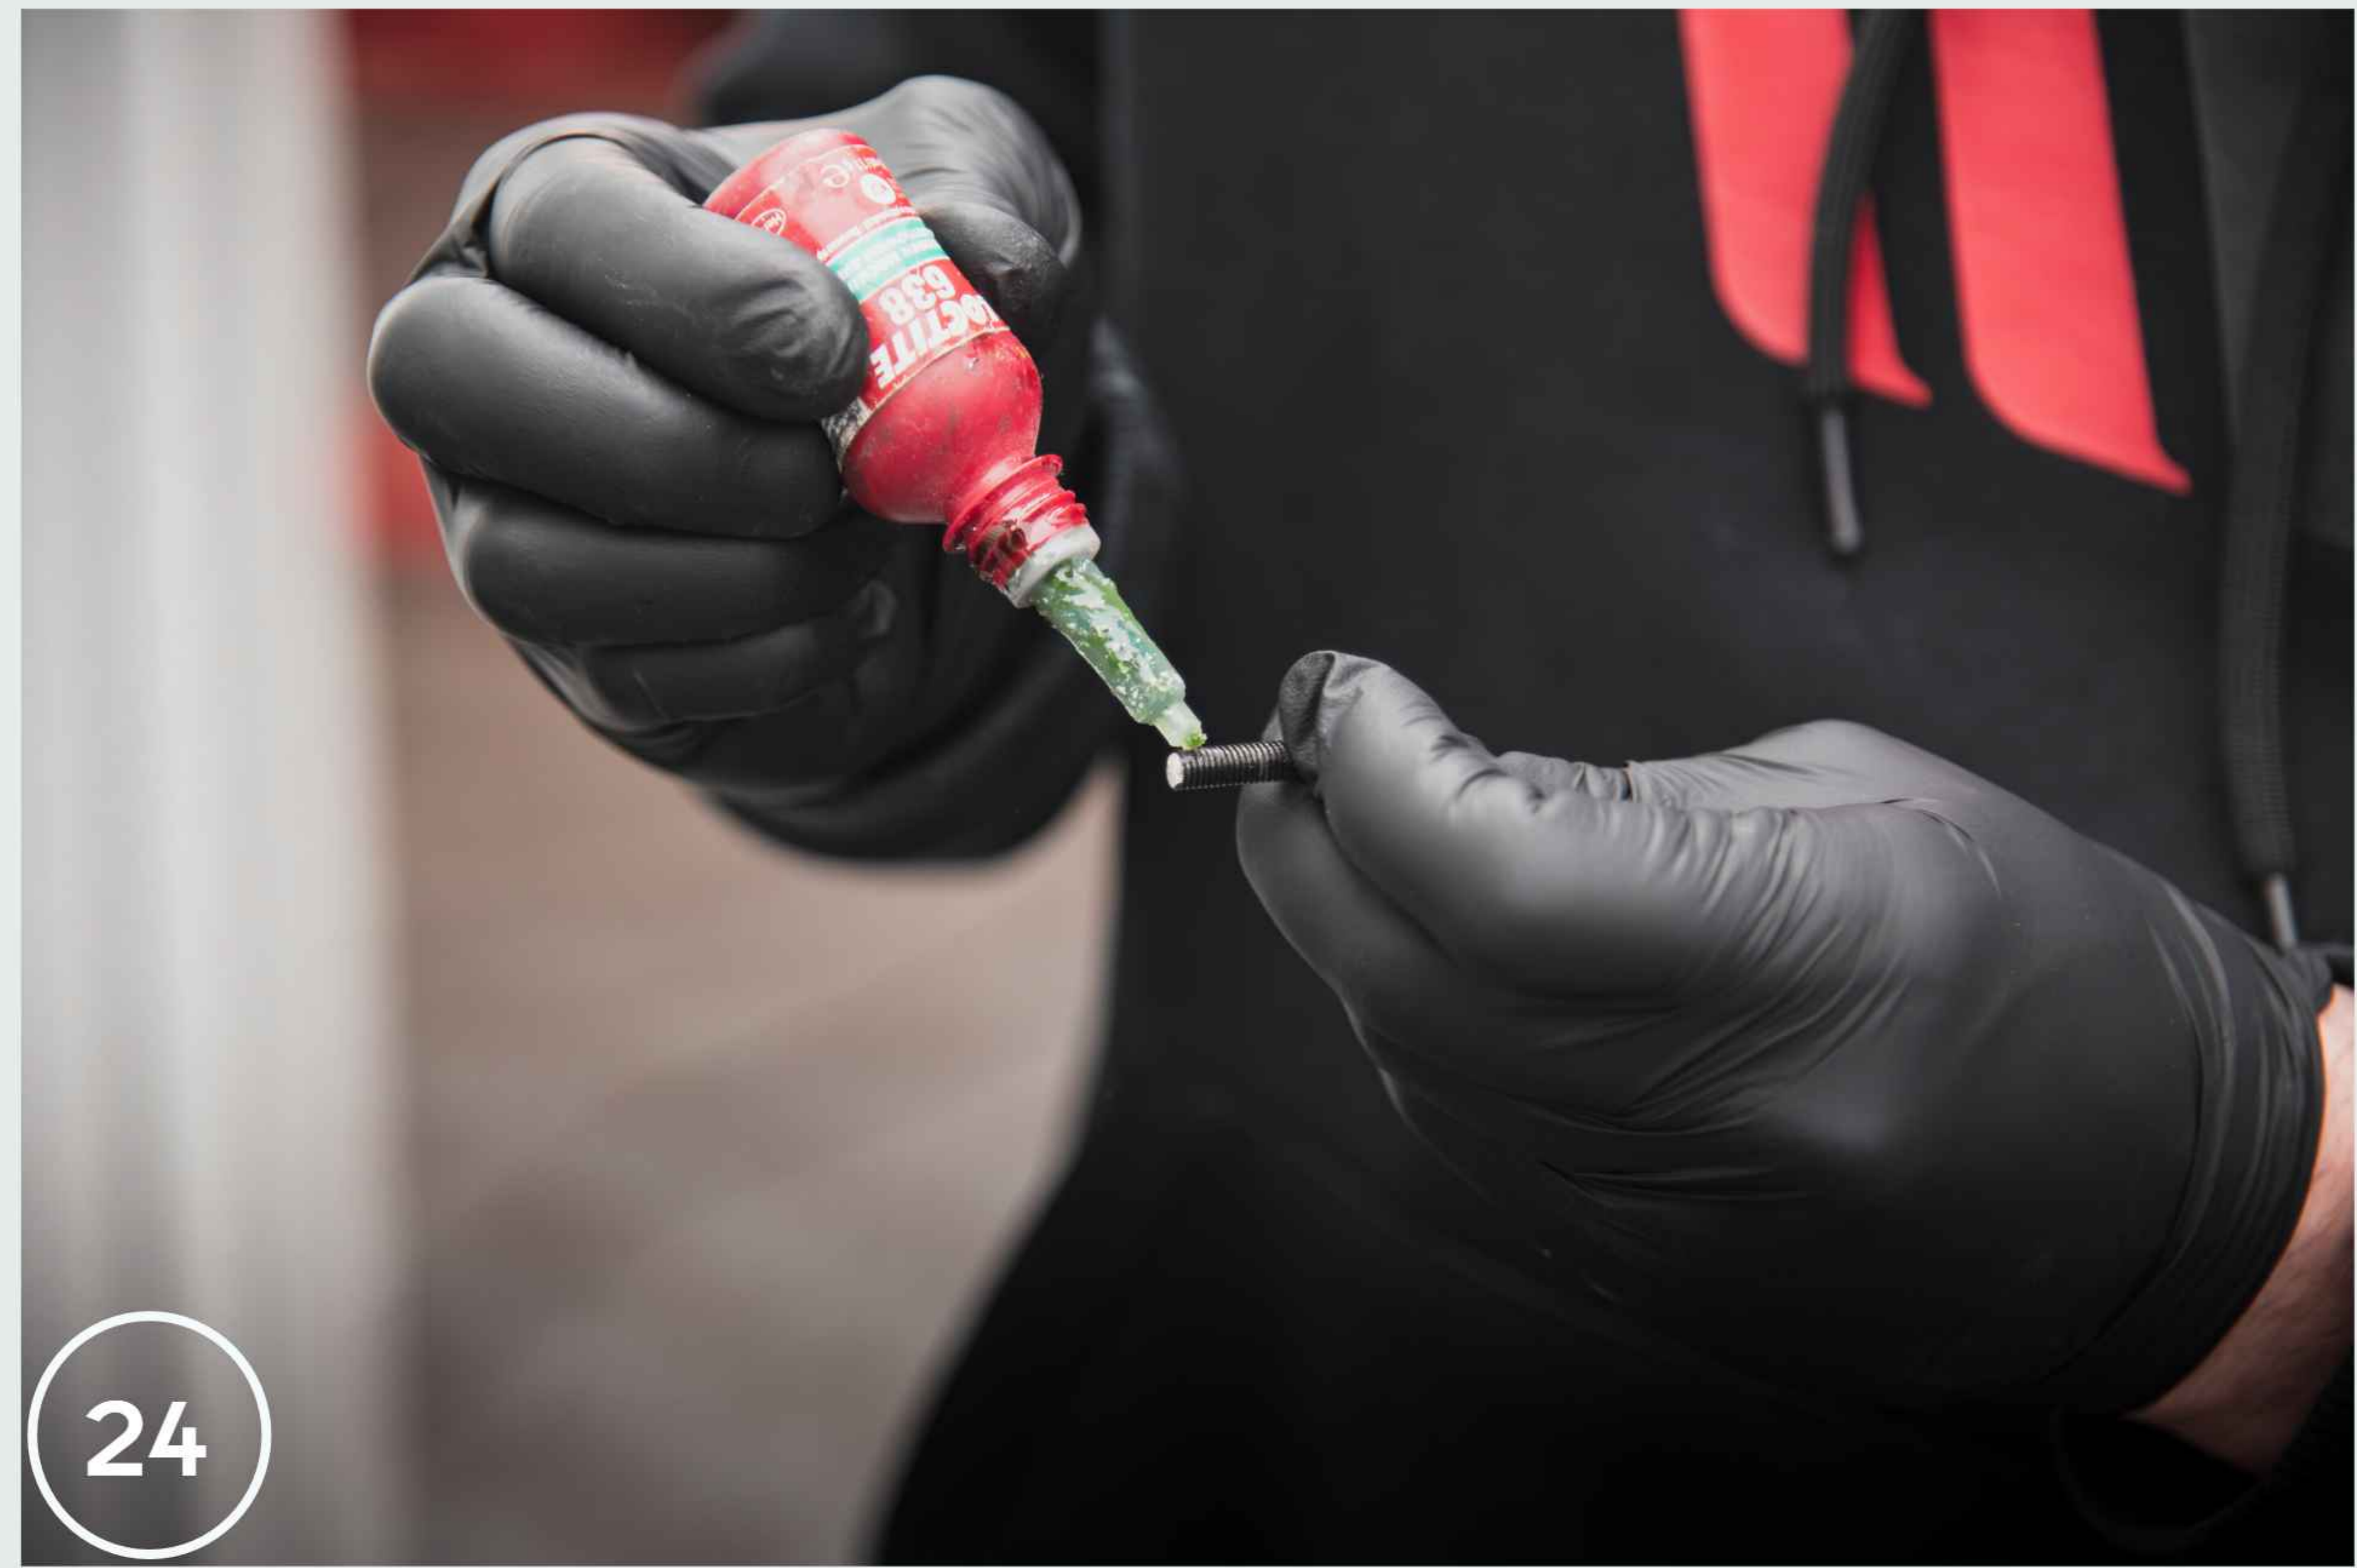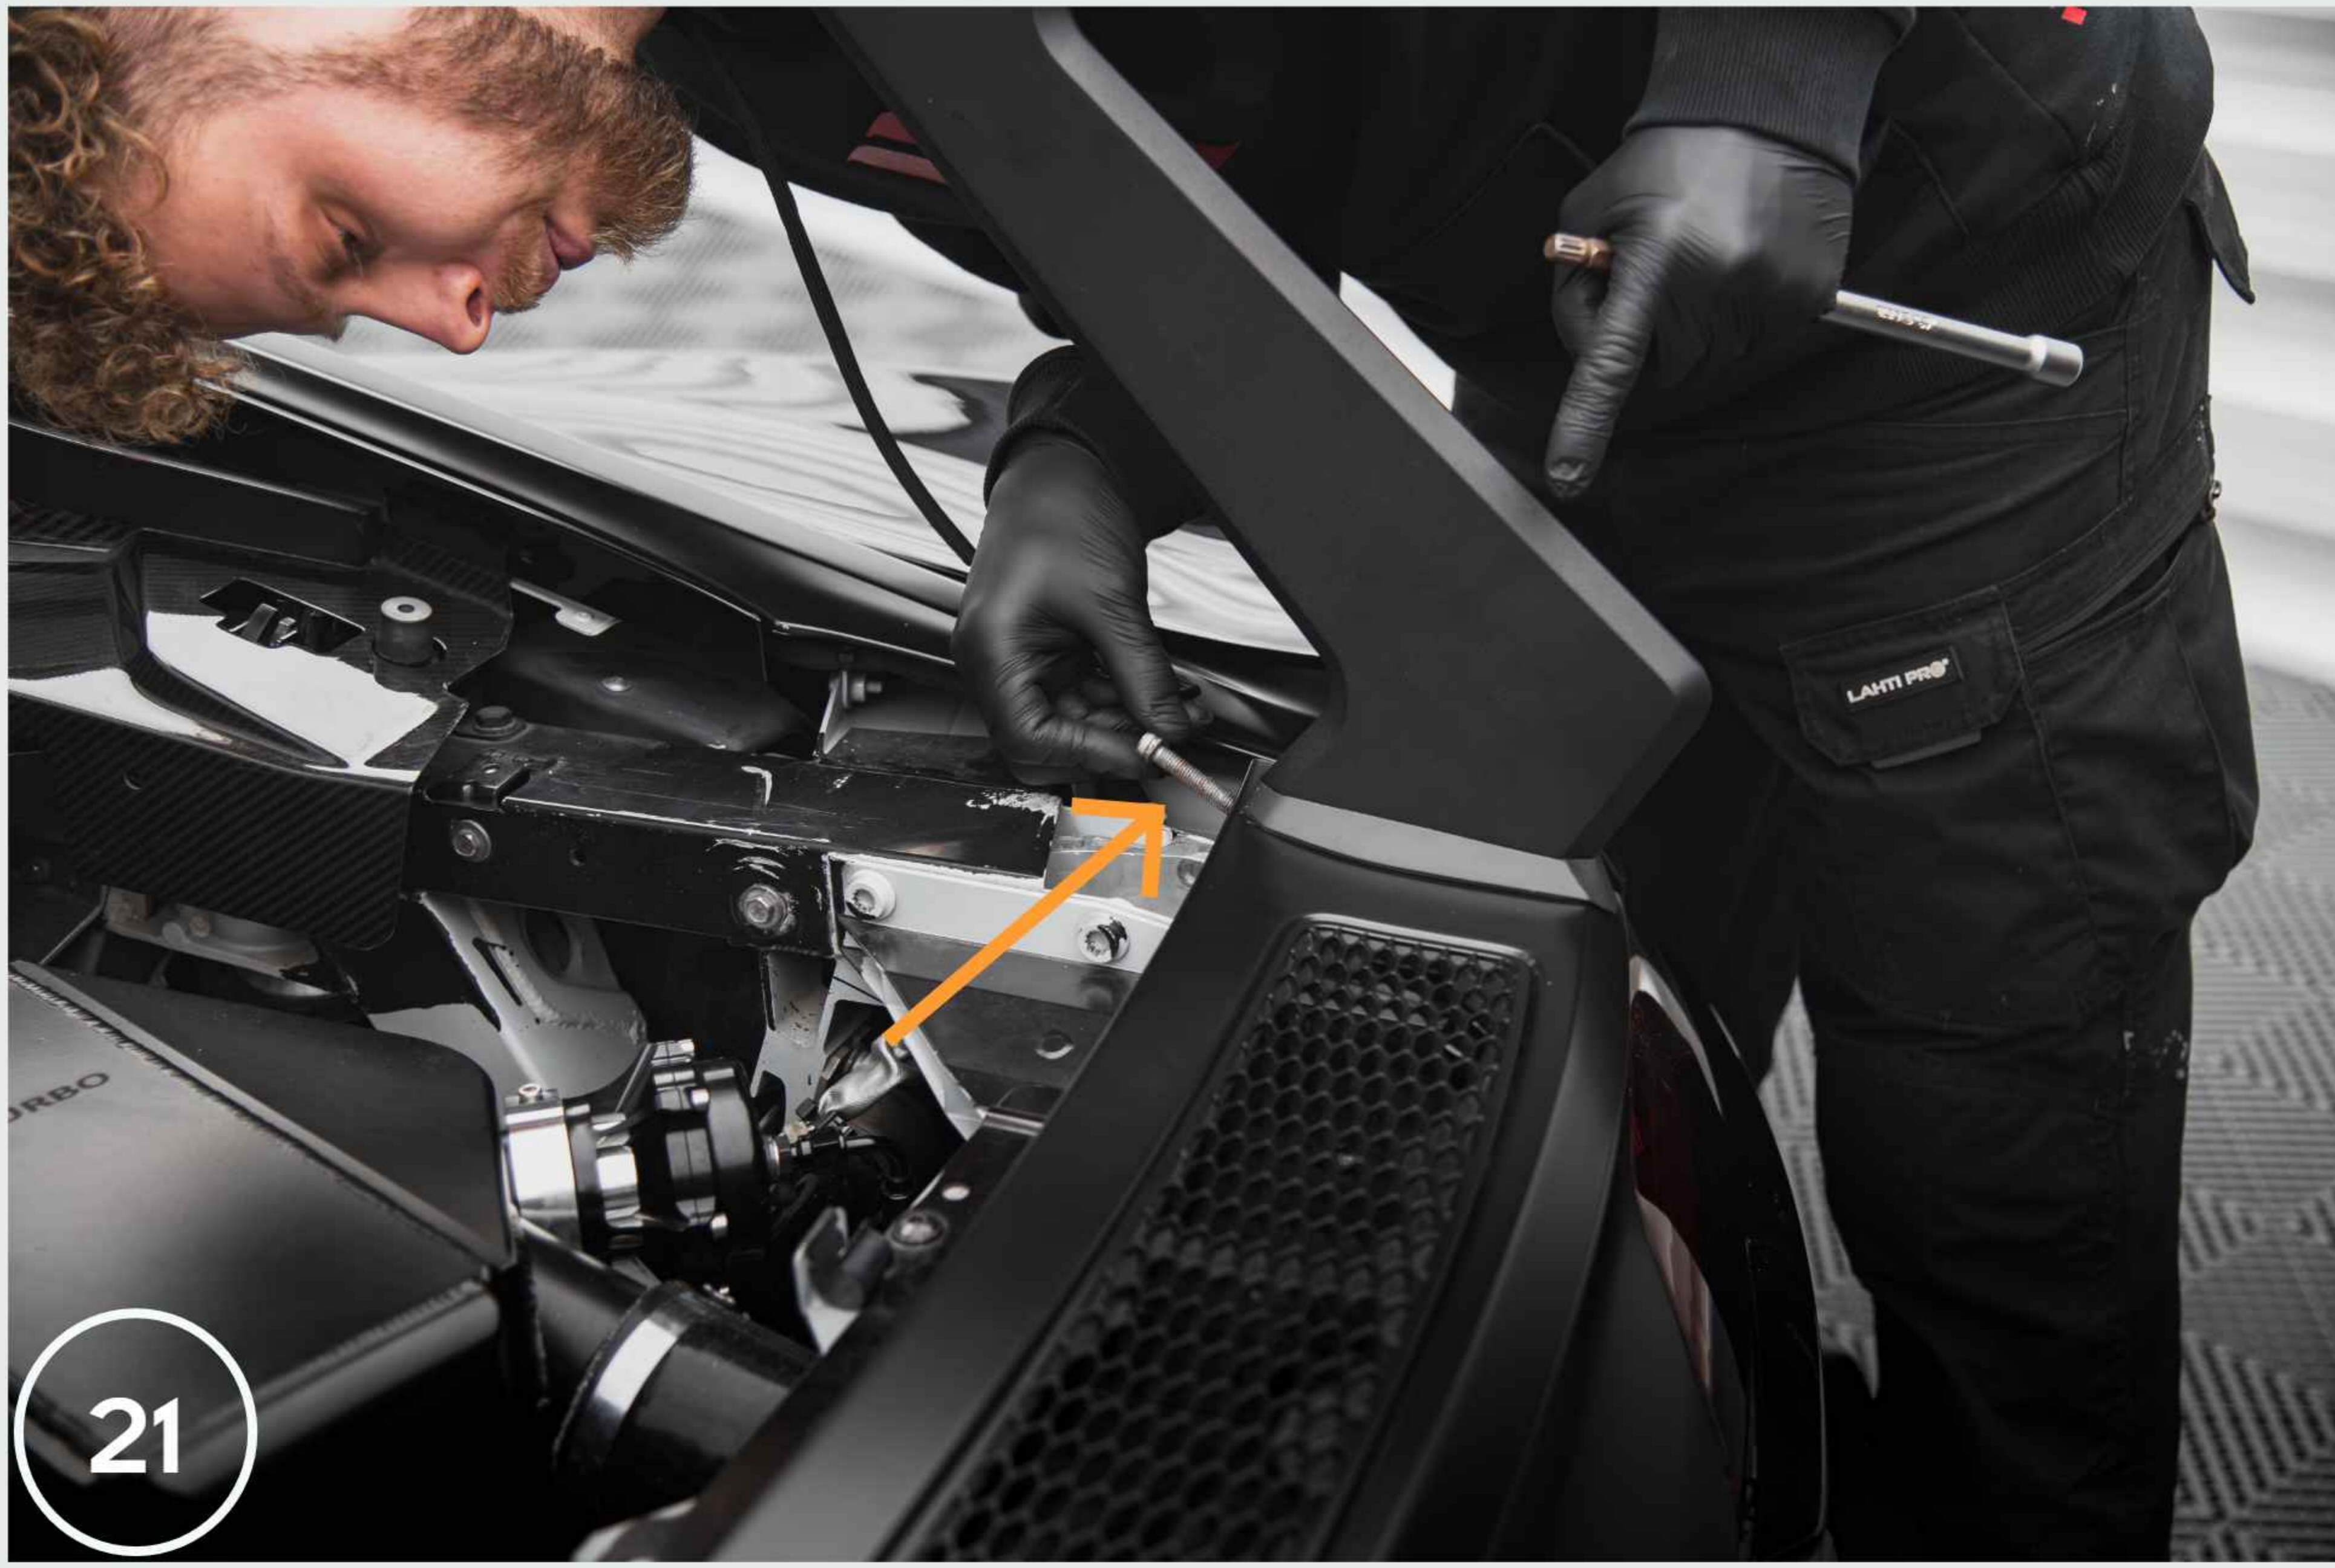

21. Insert the mounting screw through the original spoiler mounting into the spoiler mounting tip.

22. Tighten the mounting screw.

23. Attach the spoiler to the spoiler mounts.

24. Apply anti-loosening glue to the threads of the spoiler mounting screws.

25. Screw the spoiler onto the spoiler mounts.

26. The heads of the screws with conical washers should be on the outer sides, and the nuts - on the inner sides.

